

# **1750**

Power Recorder

## Operators Manual

October 2006 Rev.4, 7/11

© 2006-2011 Fluke Corporation. All rights reserved. Specifications are subject to change without notice.  
All product names are trademarks of their respective companies.

## **LIMITED WARRANTY AND LIMITATION OF LIABILITY**

Each Fluke product is warranted to be free from defects in material and workmanship under normal use and service. The warranty period is one year and begins on the date of shipment. Parts, product repairs, and services are warranted for 90 days. This warranty extends only to the original buyer or end-user customer of a Fluke authorized reseller, and does not apply to fuses, disposable batteries, or to any product which, in Fluke's opinion, has been misused, altered, neglected, contaminated, or damaged by accident or abnormal conditions of operation or handling. Fluke warrants that software will operate substantially in accordance with its functional specifications for 90 days and that it has been properly recorded on non-defective media. Fluke does not warrant that software will be error free or operate without interruption.

Fluke authorized resellers shall extend this warranty on new and unused products to end-user customers only but have no authority to extend a greater or different warranty on behalf of Fluke. Warranty support is available only if product is purchased through a Fluke authorized sales outlet or Buyer has paid the applicable international price. Fluke reserves the right to invoice Buyer for importation costs of repair/replacement parts when product purchased in one country is submitted for repair in another country.

Fluke's warranty obligation is limited, at Fluke's option, to refund of the purchase price, free of charge repair, or replacement of a defective product which is returned to a Fluke authorized service center within the warranty period.

To obtain warranty service, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that service center, with a description of the difficulty, postage and insurance prepaid (FOB Destination). Fluke assumes no risk for damage in transit. Following warranty repair, the product will be returned to Buyer, transportation prepaid (FOB Destination). If Fluke determines that failure was caused by neglect, misuse, contamination, alteration, accident, or abnormal condition of operation or handling, including overvoltage failures caused by use outside the product's specified rating, or normal wear and tear of mechanical components, Fluke will provide an estimate of repair costs and obtain authorization before commencing the work. Following repair, the product will be returned to the Buyer transportation prepaid and the Buyer will be billed for the repair and return transportation charges (FOB Shipping Point).

THIS WARRANTY IS BUYER'S SOLE AND EXCLUSIVE REMEDY AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. FLUKE SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OR LOSSES, INCLUDING LOSS OF DATA, ARISING FROM ANY CAUSE OR THEORY.

Since some countries or states do not allow limitation of the term of an implied warranty, or exclusion or limitation of incidental or consequential damages, the limitations and exclusions of this warranty may not apply to every buyer. If any provision of this Warranty is held invalid or unenforceable by a court or other decision-maker of competent jurisdiction, such holding will not affect the validity or enforceability of any other provision.

# Table of Contents

| Title                                                 | Page |
|-------------------------------------------------------|------|
| Introduction.....                                     | 1    |
| Contacting Fluke.....                                 | 2    |
| Safety Information .....                              | 3    |
| Accessories .....                                     | 4    |
| Features.....                                         | 5    |
| Applying the Front Panel Decal.....                   | 7    |
| Charging the PDA Battery.....                         | 9    |
| Installing the Software .....                         | 9    |
| Installing Power View on the PDA .....                | 9    |
| Language Selection .....                              | 10   |
| PC System Requirement for Power Analyze.....          | 10   |
| Installing Power Analyze .....                        | 10   |
| Installing the Power Recorder at a Facility.....      | 11   |
| Work Flow.....                                        | 11   |
| Installing the Recorder .....                         | 11   |
| Connecting the Recorder to the Wiring.....            | 12   |
| Verifying Your Connection.....                        | 13   |
| Finishing Up .....                                    | 13   |
| Managing Recorded Data .....                          | 14   |
| Power Type Diagrams .....                             | 14   |
| Communicating with the Recorder Using Power View..... | 25   |
| Navigating in Power View on the PDA.....              | 26   |
| Power View Menus .....                                | 26   |
| Icons on the Menu Bar .....                           | 27   |
| Menu Tree.....                                        | 28   |
| Home Screen.....                                      | 29   |
| Downloading Data and Erasing Memory .....             | 31   |
| Auto Download .....                                   | 31   |
| PDA Download .....                                    | 32   |
| Viewing Live Data.....                                | 35   |
| Scope Screen .....                                    | 36   |
| Meter Screen.....                                     | 36   |
| Phasor Screen .....                                   | 37   |
| Harmonics Screen.....                                 | 37   |

|                                                                          |    |
|--------------------------------------------------------------------------|----|
| Trend Screen.....                                                        | 38 |
| Viewing Phases .....                                                     | 38 |
| Setting Up the Recorder.....                                             | 39 |
| Setting the Clock .....                                                  | 40 |
| Probe Detect .....                                                       | 40 |
| Setting the IP Address .....                                             | 41 |
| Adding a Measurement Description.....                                    | 41 |
| Configure Nominal Power Values.....                                      | 42 |
| Using Phase Swap .....                                                   | 42 |
| Setting the Volts and Current Ratio.....                                 | 43 |
| Assign Recorder Name and Password.....                                   | 43 |
| Setting the Snapshot Period - Periodic Waveform Capture Setting .....    | 44 |
| Change Display Language and Phase Identifier.....                        | 45 |
| Working with Annotations .....                                           | 45 |
| Using Image or Voice Annotations.....                                    | 47 |
| Inserting Image or Voice Annotations .....                               | 47 |
| Turn off the Recorder .....                                              | 47 |
| Cleaning and Maintenance.....                                            | 48 |
| Regulatory Information for Wireless Communication .....                  | 48 |
| Specifications for the System: Recorder and Power Analyze Software ..... | 49 |
| General Specifications.....                                              | 49 |
| Input Specifications.....                                                | 50 |
| Synchronization and Sampling.....                                        | 50 |
| Voltage and Current Measurements .....                                   | 50 |
| Voltage and Current Measurement Accuracy .....                           | 50 |
| Transient Voltage (Impulse).....                                         | 51 |
| Dip (Sag) and Swell Measurements .....                                   | 51 |
| Power and PF Measurement.....                                            | 51 |
| External Interface Specifications.....                                   | 52 |
| Environmental and Safety Specifications.....                             | 52 |

## ***List of Tables***

| <b>Table</b> | <b>Title</b>                      | <b>Page</b> |
|--------------|-----------------------------------|-------------|
| 1.           | Symbols.....                      | 4           |
| 2.           | Standard Accessories .....        | 4           |
| 3.           | Input Terminals and Controls..... | 6           |

## ***List of Figures***

| <b>Figure</b> | <b>Title</b>                                      | <b>Page</b> |
|---------------|---------------------------------------------------|-------------|
| 1.            | Fluke 1750 Power Recorder .....                   | 5           |
| 2.            | Applying the Front Panel Decal .....              | 7           |
| 3.            | Connecting the Supplemental Ground Terminal ..... | 8           |
| 4.            | One Phase Plus Neutral .....                      | 15          |
| 5.            | One-Phase IT No Neutral .....                     | 16          |
| 6.            | One-Phase Split Phase .....                       | 17          |
| 7.            | Three-Phase Wye .....                             | 18          |
| 8.            | Three-Phase Delta .....                           | 19          |
| 9.            | Three-Phase IT .....                              | 20          |
| 10.           | Three-Phase High Leg .....                        | 21          |
| 11.           | Three-Phase Open Leg .....                        | 22          |
| 12.           | 2-Element Delta .....                             | 23          |
| 13.           | 2 ½-Element Wye .....                             | 24          |
| 14.           | Connecting to the Recorder .....                  | 25          |
| 15.           | Power View Menu Tree .....                        | 28          |

# 1750 Power Recorder

## Introduction

The Fluke 1750 Power Recorder is a comprehensive yet easy to use system for power quality investigations. The 1750 Power Recorder, referred to hereafter as simply “the Recorder or the Product,” consists of a power recorder instrument, a wireless handheld Personal Digital Assistant (PDA) for control and setup, and a powerful yet easy to use PC application, Power Analyze. Four 400 A current probes are provided as standard equipment (not included in Basic version). A wide range of flexible and clamp-on current probes are available from Fluke.

Key features of the 1750 Power Recorder are:

- No PC needed for setup

Using the included wireless-enabled Personal Digital Assistant (PDA) as a controller, you do not need a PC to configure the Recorder, troubleshoot connections, preview data, or download the recorded data. Downloaded data goes onto the SD memory card plugged into the 1750, not directly to the PDA. The range of the PDA with the wireless link is about 5 meters (16 feet) from the Recorder. This range is dependent on the electrical interference in the location.

- Simplified test lead connections to the power network

Simply connect a voltage probe to a conductor on each phase that you want to record. On the current inputs, the Recorder automatically identifies what type of probe is connected. The Recorder then configures its measurement system appropriately for the model of current probe you are using.

- Connection diagrams for the supported power network configurations (delta, Wye, and others) appear on the handheld PDA controller. Once you make connections, you can view live readings and a phasor diagram on the PDA to confirm the connections. If a phase channel is wired incorrectly, you can swap the phase to another channel by changing an internal Recorder setting using the PDA, and then reconfirm correct readings.

- Internal Uninterruptible Power Supply (UPS)

An internal NiMH (Nickel-Metal-Hydride) battery pack and charging system maintain data capture continuity through power interruptions of approximately 5 minutes or less.

## **Safety Information**

See the Specifications section for a full agency compliance list. Table 1 lists symbols that appear on the Recorder and in this manual.

### **Warning**

To prevent possible electrical shock, fire, or personal injury:

- Carefully read all instructions.
- Do not work alone.
- Do not use the Product around explosive gas, vapor, or in damp or wet environments.
- Use only insulated current probes, test leads, and adapters as supplied with the Product.
- Examine the case before you use the Product. Look for cracks or missing plastic. Carefully look at the insulation around the terminals.
- Remove all probes, test leads, and accessories that are not necessary for the measurement.
- Make sure the ground conductor in the mains power cord is connected to a protective earth ground. Disruption of the protective earth could put voltage on the chassis that could cause death.
- Only use probes, test leads, and accessories that have the same measurement category, voltage, and amperage ratings as the product.
- Do not use exposed metal BNC or banana plug connectors.
- Do not put metal objects into connectors.
- Do not operate the Product with covers removed or the case open. Hazardous voltage exposure is possible.
- There are no user-replaceable parts in the Product. Have an approved technician repair the Product.
- Use the Product only as specified, or the protection supplied by the Product can be compromised.

Table 1. Symbols

| Symbol                                                                            | Meaning                                                                                                                                                                                                             | Symbol                                                                            | Meaning                                                                                                                                                               |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Hazardous voltage. Risk of electrical shock.                                                                                                                                                                        |  | Risk of danger. Important information. See manual.                                                                                                                    |
|  | Conforms to requirements of European Union and European Free Trade Association (EFTA).                                                                                                                              |  | Do not dispose of this product as unsorted municipal waste. Contact Fluke or a qualified recycler for disposal.                                                       |
|  | Canadian Standards Association.<br>[Note: Canadian and US.]                                                                                                                                                         |  | Protective conductor terminal.                                                                                                                                        |
| <b>CAT III</b>                                                                    | CAT III equipment is designed to protect against transients in equipment in fixed-equipment installations, such as distribution panels, feeders and short branch circuits, and lighting systems in large buildings. | <b>CAT IV</b>                                                                     | CAT IV equipment is designed to protect against transients from the primary supply level, such as an electricity meter or an overhead or underground utility service. |

## Accessories

Table 2 describes the standard accessories that ship with the Recorder.

Table 2. Standard Accessories

| Description                                                                   | Part Number      |
|-------------------------------------------------------------------------------|------------------|
| Ethernet cable, 3 meters, yellow                                              | 2402854          |
| Colored plastic clips for test leads (32 clips, 8 colors, 4 clips each color) | 2157607          |
| Model TLS430, test lead set including cable and clips                         | 2157713          |
| Secure Digital (SD) Memory Card for downloading data                          | Call for details |
| Model 3140R, 400 A Clamps (4-not included with Basic version)                 | 2277216          |
| AC power cord, 3 meters                                                       | 2441360          |
| Personal Digital Assistant (PDA) with USB cable and accessories               | 2386780          |
| CD-ROM Manuals and Software                                                   | 2386771          |
| 1750 Getting Started Guide                                                    | 2386767          |
| Sheet of Front Panel Decals                                                   | 2436261          |
| Sets of international ac power plug adapters for the PDA charger              | 2583479          |
| International adapters for the Recorder power cord                            | 2441372          |

S

- CS1750/1760 Case Polyester, for Fluke 1750 & 1760
- Fluke-1750/Case Transit Case, Molded, Flk-1750 and 1760
- 4006 RPM, Security CBL, Steel, 6 ft. Looped Lockable
- 4003 RPM, Shipping Caddy with Wheels

- 4005 RPM, Shipping Container, Reusable
- Replacement Voltage Lead Set
- Clamp-on Current Transformers (i5s-PR 5 Amp, Clamp with 10 ft. Cable,
- i40s-PR 40 Amp, Clamp with 10 ft. Cable), Flex CT 24 in, 3140R Current Clamp, 400 Amp
- Flexible Current Transformers 3210-PR-TF 1000 Amp, Flex CT 24 IN, 3310-PR-TF 5000 Amp, Flex CT 24 in., 3312-PR-TF 5000 Amp, Flex CT 48 in.
- Interface and Extension Cables  
3570 CT Cable
- Replacement/Additional Memory card:  
Fluke-1750/MC2GB 1750 2GB Secure Digital Memory Card

## Features

The Recorder front panel is illustrated in Figure 1 and described in Table 3.

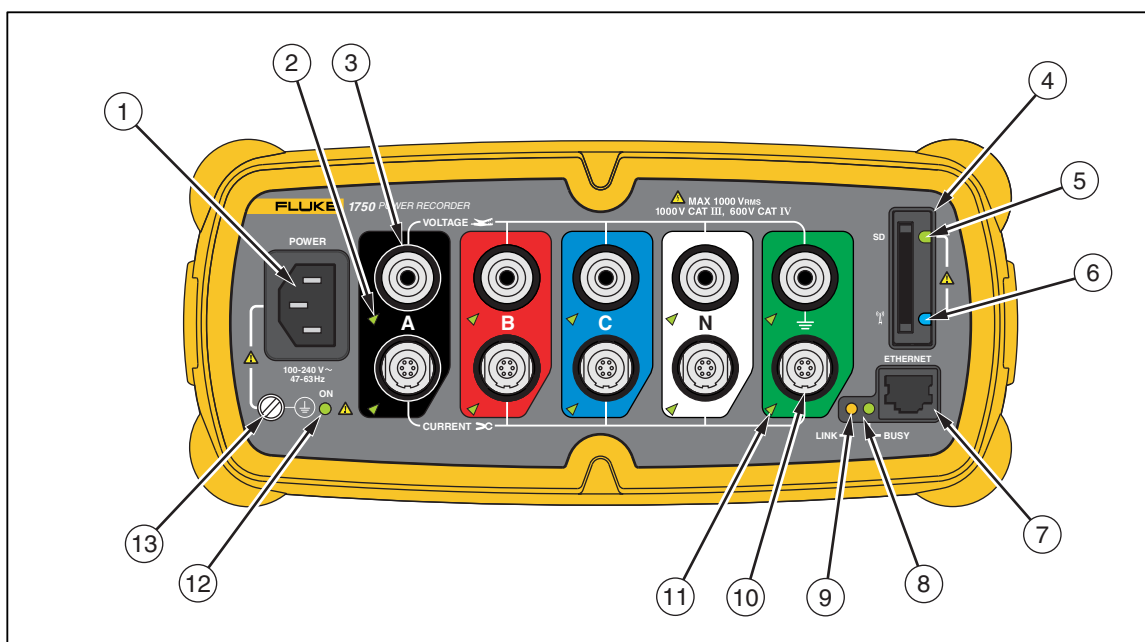


Figure 1. Fluke 1750 Power Recorder

azd09f.eps

### **⚠ Caution**


Connecting the supplemental ground terminal and the line cord safety ground to different ground potentials creates a ground loop that can damage the Recorder.

**Table 3. Input Terminals and Controls**

| Number | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ①      | Standard 120/240 V 50/60 Hz power input for Recorder power                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| ②      | Voltage indicator<br>Steady Voltage is present, not overloaded<br>Blinking Voltage overload (overload threshold 1100 V)                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| ③      | Five voltage measurement inputs                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| ④      | Removable Secure Digital (SD) memory card for transfer of large quantities of data. You can remove the card from the Recorder, insert in the PDA and transfer data to the PC via the “synchronize data” feature of the PDA. A USB SD card reader may also be used.                                                                                                                                                                                                                                                                                                                    |
| ⑤      | SD status indicator<br>Blinking green Reading from SD card – do not remove the card<br>Blinking orange Writing to SD card – do not remove the card<br>Off No active SD card operation – you can safely remove the card                                                                                                                                                                                                                                                                                                                                                                |
| ⑥      | Wireless Controller Status Indicator<br>Blinking Wireless controller communicating<br>Off Inactive                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| ⑦      | Ethernet port. TCP/IP via Ethernet is used to connect the Recorder to a PC for downloading recorded data, and for configuring the Recorder when not using the PDA. This is the recommended method of data transfer due to its speed and reliability.                                                                                                                                                                                                                                                                                                                                  |
| ⑧      | Busy Indicator<br>Blinking Network is busy                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| ⑨      | Link indicator<br>Off No link<br>Steady Link Present<br>Blinking Communicating with PC                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| ⑩      | Current Measurement Terminals (5)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| ⑪      | Current indicator<br>Steady Current probe in normal range<br>Blinking >110 % of probe range, use a higher range probe<br>Off Current insufficient to measure                                                                                                                                                                                                                                                                                                                                                                                                                          |
| ⑫      | Power LED<br>Steady green AC input power normal, instrument is not booted or locked<br>Green/Orange blinking Recording<br>Blinking red Recorder running on UPS                                                                                                                                                                                                                                                                                                                                                                                                                        |
| ⑬      | Ground Terminal<br>Connecting the supplemental ground terminal and the line cord safety ground to different ground potentials creates a ground loop that can damage the Recorder. To avoid this, use the supplemental ground terminal only when no protective earth ground connection exists through the line power cord. If there is any chance that a safety ground connection does exist through the line power cord connection, make sure to connect the supplemental ground terminal only to the ground system used by the ac receptacle that powers the Recorder. See Figure 3. |

The diagram illustrates the color coding for electrical plug pins across six different regions. Each region's diagram shows a row of five pins with their respective colors and labels. The pins are connected to a common ground line at the bottom, and a voltage line is shown at the top. The current direction is indicated by arrows pointing from the pins to the ground line.

- EUROPE & UK (new std):** L1 (Brown), L2 (Black), L3 (Grey), N (Blue), and Ground (Green with diagonal stripes).
- UK:** L1 (Red), L2 (Yellow), L3 (Blue), N (Black), and Ground (Green with diagonal stripes).
- EU (old std):** L1 (Black), L2 (Red), L3 (White), N (Blue), and Ground (Green with diagonal stripes).
- USA:** L1 (Black), L2 (Red), L3 (Blue), N (White), and Ground (Green with diagonal stripes).
- China:** L1 (Yellow), L2 (Green), L3 (Red), N (Black), and Ground (Green with diagonal stripes).
- Canada:** L1 (Red), L2 (Black), L3 (Blue), N (White), and Ground (Green with diagonal stripes).

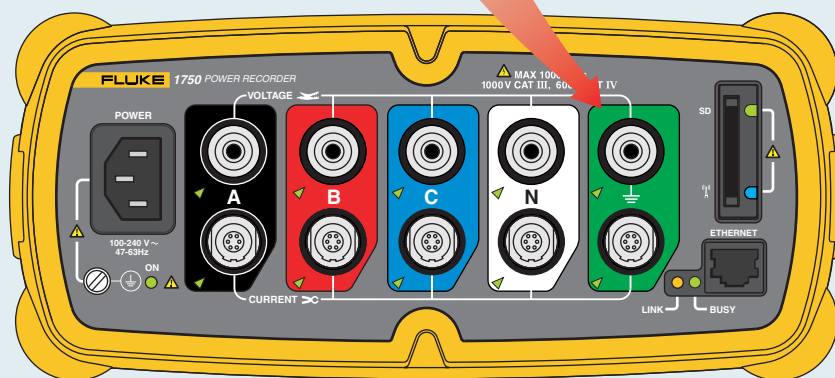

azd17f.eps

**⚠ Caution**

Connecting the supplemental ground terminal and the line cord safety ground to different ground potentials creates a ground loop that can damage the Recorder.

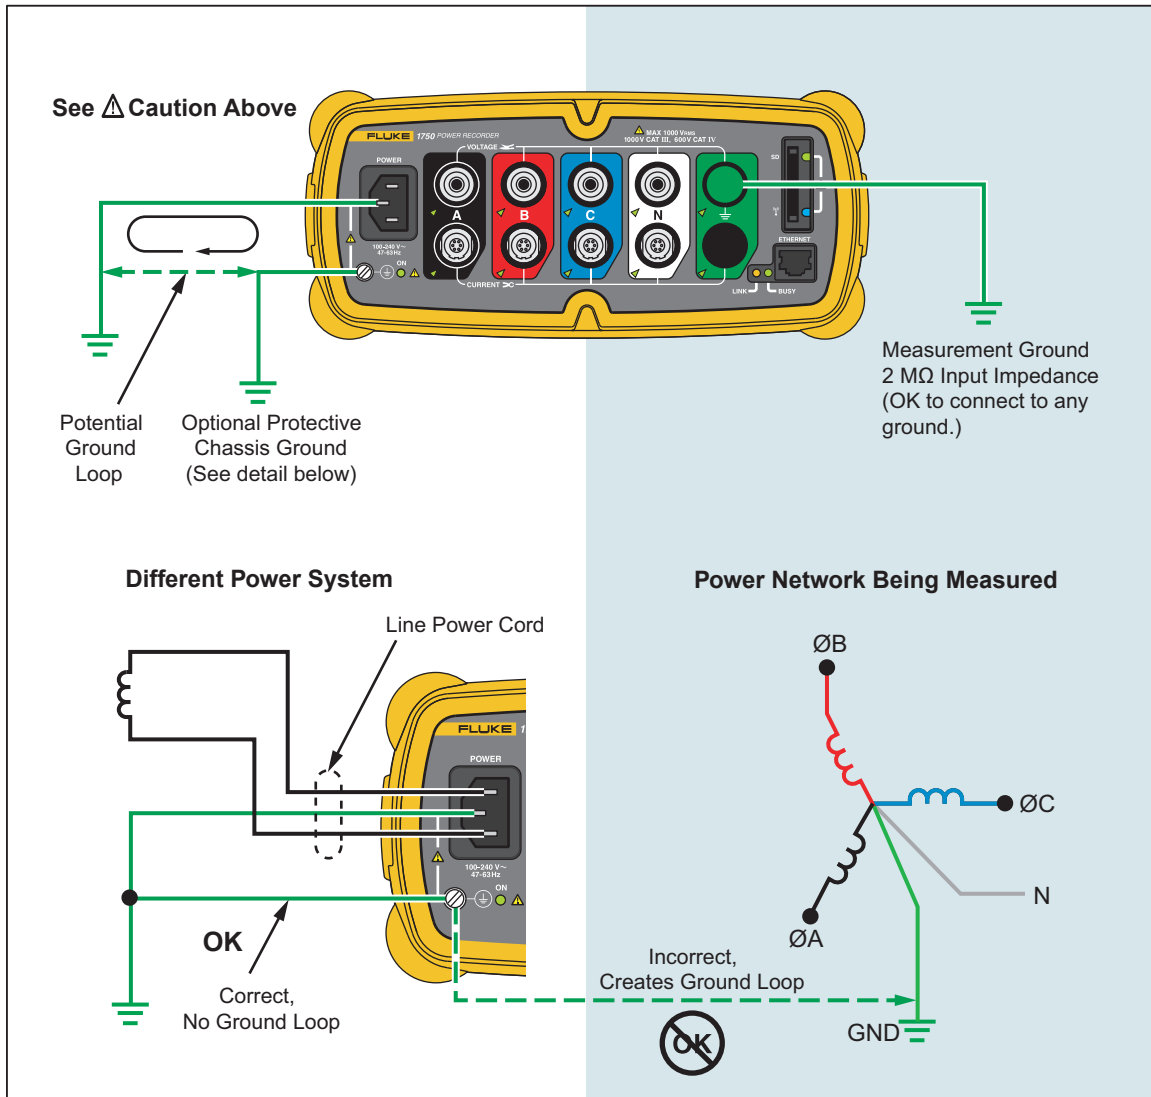


Figure 3. Connecting the Supplemental Ground Terminal

azd11f.eps

## **Charging the PDA Battery**

Your PDA is shipped with a discharged or partially charged, rechargeable battery. You should fully charge the battery before setting up the device, and recharge it regularly. Refer to your PDA user's guide for detailed information about the battery.

### **⚠ Caution**

**Do not leave important data on the PDA. If the battery discharges completely, you will lose all data not stored in File Store (ROM). Discharging the battery completely is similar to performing a hard reset. Refer to the PDA Users Manual for more information.**

## **Installing Power View on the PDA**


1. Insert the CD that ships with your PDA. Follow the on-screen instructions to install the ActiveSync software for Windows XP (or Mobile Device Center for Windows Vista and Windows 7) that allows your PC to communicate with the PDA.
2. Connect the PDA to your PC with the USB lead and establish communication between the PDA and your PC. Keep your product CD in case you need to reinstall this software in the future.
3. Insert the CD that ships with your Recorder in the CD-ROM drive on your PC.
4. A window appears that lists options on the CD. If the install software window does not automatically appear, do the following:
  - a. Use Windows Explorer to locate the **sw/FPV\_Vx.yy.exe** file on the CD. Replace x.yy with the current version number shipped on the CD.
  - b. Double-click **FPV\_Vx.yy\_Install.exe** to launch the installation program.
5. Select a language preference for the installation.
6. Follow the on-screen prompts.

Power View is installed in the Programs folder on the PDA.
7. To start Power View, select Start, and then Programs on the PDA.
8. Tap the Power View icon () to start using the application.

## Language Selection

Power View features a localized user interface for English, German, French, Spanish, Chinese, and Italian. When Power View operates for the first time on a new PDA or after a hard reset, it directly opens the language setup window. This window is also accessed by **Menu>1750 Setup>Language**.

The Language window also provides the option to choose between the phase identifiers A, B, C and L1, L2, L3.

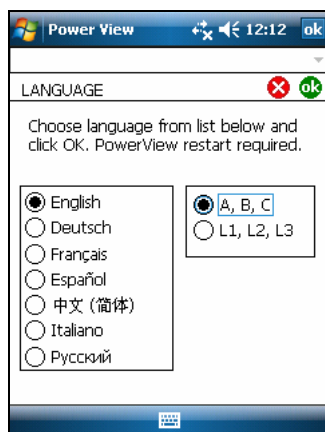

azd110.bmp

## PC System Requirement for Power Analyze

- Windows XP, Windows Vista 32/64bit, Windows 7 32/64bit. Administrator privileges are required to install applications.
- PC with 500 MHz or faster processor.
- 256 MB RAM, 1 GB recommended (100 MB of available disk space, 10 GB recommended).
- 1024 x 768 or higher resolution video.
- Keyboard and mouse.

## Installing Power Analyze

Before installing the software on your PC, make sure you have Internet Explorer version 6, or later, installed. Other recommended software:

- Adobe Acrobat Reader
- Microsoft Word 2000 or higher
- Microsoft Excel 2000 or higher

### **⚠ Caution**

**Do not remove the CD until after you have successfully installed the software, rebooted the machine, and opened the application.**

1. Insert the CD into your CD-ROM drive.

2. A window appears that lists options on the CD. If the window does not automatically appear:
  - a. Use Windows Explorer to locate the **sw/FPA\_Vx.yy.exe** file on the CD. Replace x.yy with the current version number shipped on the CD.
  - b. Double-click **FPA\_Vx.yy\_Install.exe**.
3. Select a language preference for the installation process. Power Analyze initially starts in this language. You can change the language from the menu **Settings>Language**.
4. Follow the installation instructions that appear. After software installation is complete, the Power Analyze icon  appears on your desktop.
5. Start Power Analyze on your PC by choosing **Start >All Programs >Fluke >Power Analyze >Power Analyze** or double-click the Power Analyze icon  on your desktop.

or

## **Installing the Power Recorder at a Facility**

This section describes the steps you need to take to set up the Recorder at a facility and begin a recording session.

### **Work Flow**

There are three distinct stages for a recording session.

- **Setup**  
Setup, hookup, and verification of connections and measured signals. This is when you will want to clear the Recorder memory (not required, but best practice because data download when finished only contains your new data). This is a good time to change any recorder settings. Edit the measurement description now or after downloading the measurement data and insert annotations and/or an optional START mark into the recorded data stream. Annotations are messages or notes you insert into the data stream during a recording session.
- **Interim checkup, mid-recording session**  
At this time, you may want to re-check all the live input signals, and download the data recorded since the beginning of the recording session. This does not interfere with ongoing recording in any way. Annotation capability is always available during the recording session.
- **End of recording session**  
You can re-verify if desired, correctness of live data and then download data, power off the Recorder, and pack up for transport.

### Installing the Recorder

1. Position the Recorder within 2 m (6 ft) of the monitoring location.
2. The Recorder can be set on the floor or a table, or attached and secured to a pole or other mounting surface. The Recorder can be oriented vertically or horizontally.
3. Connect the Recorder to a 100 to 240 V ac power source, 50 or 60 Hz.
4. Plug the power cord into a properly-grounded wall outlet.

#### **Caution**

##### **To avoid damage to the Recorder:**

- **Ground the chassis as appropriate according to your power connection before you do anything else.**
- **Connect the power cord to the Recorder using the appropriate supplied adapter.**
- **Connect the power cord to a properly grounded wall outlet.**
- **Be sure to plug the power cord into the Recorder panel BEFORE connecting it to an outlet.**

After a minute, or two, all LEDs should flash **ON**, then **OFF**, and then each should turn ON and OFF in sequence. The LEDs will then remain on if you make secure test lead connections and there is sufficient voltage and current.

5. Turn on the PDA and tap the Power View icon  to launch Power View.

If a Recorder is within range and is not password protected, it should appear in the drop down menu just below the main title bar on the PDA. You may need to select **Browse for recorder** when first connecting. Select the recorder you want to browse to with the PDA stylus. Upon selection, the Home screen for live data appears.

If more than one Recorder is within range, these will appear in the drop down menu list.

6. If you have previously established password protection for the Recorder, you must type the correct password in the Password text box and click **OK**. (Password protection is established for a specific Recorder using either the Setup Password menu in Power View or the Power Analyze software).

### Connecting the Recorder to the Wiring

After you have set up the Recorder you are ready to connect the voltage leads and current probe or flexi-probes to the power network being tested. Refer to the Power Type diagrams provided on the PDA or in this manual.

#### **Warning**

##### **To prevent possible electrical shock, Flexi-probes should not be applied or removed from hazardous live conductors.**

In most cases, you should install the current probes first. Because they are clamped around wires, current probes are usually more secure than voltage probes. Examine the conductors you are about to connect to and determine if you should attach the current probes to the phase wires or busbars before you connect the voltage probes.

1. Select and attach the appropriate current probes to the Recorder.
2. Select and attach the appropriate voltage test leads and probes to the Recorder.

*Note*

*If your power connections require potential transformers (PTs) or current transformers (CTs), you can use the ratio settings in Power View to set the Recorder to display readings as they exist on the primary side of the PT and CT (for example, 12000 V).*

3. Connect the Recorder to the wiring by first connecting the measurement ground test lead to the distribution system ground, and then the neutral probe to neutral.
4. Connect the ground current probe to the distribution system ground and the neutral current probe to neutral, with the arrow on the current probe pointing towards the load (away from the source) in each case.
5. Connect the remaining current probes to the power network.
  - The arrow on the current probe should point toward the load.
  - Use the color-coding on the leads to help you connect the probes to the correct phases, neutral and ground.
6. Connect the remaining voltage probes.

*Note*

*Make sure the voltage probes and current probes are paired correctly, Phase A (L1) voltage to Phase A (L1) current and so forth. Calculations are made in pairs and cannot be changed after data is recorded. The leads for the voltage probe and current probe of the same color should be attached to the same phase wire or busbar.*

7. Check the LED for each phase to make sure a connection is established.
  - When a phase LED is ON or lighted, you know that the connection is active and that voltage and current is within the normal range.
  - When a phase LED is BLINKING, you are connected but the voltage or current is exceeding the normal range or exceeding the range of the probe that you are using.
  - When a current LED is OFF or unlit, there is insufficient current present in the line.

### **Verifying Your Connection**

Before you leave the Recorder to accumulate data at the facility, double-check the connections.

- Make sure the current probes are secured and completely closed around the conductors and that the voltage and current LEDs are steady-on.
- Use the PHASOR screen on the PDA or PC to verify that the voltage and current connections are correct. You can swap the connections using Power View if they are incorrect.

### **Finishing Up**

After making any corrections to the connections, recheck the PHASOR diagrams to confirm your connection. Make sure the nominal voltage, nominal line frequency, and power type (delta, wye, other) are correct before you leave the Recorder. It is a good practice to insert a Start Mark when you are finished with all settings so you can download data and ignore useless readings and events common at the beginning probe connecting activities. You can also use the “**Erase Memory**” function and measurement

descriptions such as company, name, and measurement purpose. This can be done at this point or after downloading the measurement data.

### **Managing Recorded Data**

Recorded data resides in the Recorder on an internal non-physically accessible flash memory circuit. The transfer of recorded data to the SD card in the Recorder's SD slot is automatic when you insert the SD card or you request a download action using the PDA. Downloading to a PC running Fluke Power Analyze Software (included) using the Ethernet cable is recommended and the fastest way to retrieve data from the Recorder.

#### *Note*

*To stop the automatic copy from the SD card memory, go to **Menu >Tools >1750 Internal Memory** or **Menu >Tools >1750 SD Memory**.*

It is never technically necessary to erase internal memory. When the Recorder has new data to record, it does so automatically, overwriting the oldest data (circular memory). You can erase internal memory for security reasons, or if you want to simplify what you will be seeing in the download data screen. The start and end times will represent one recording session when old data is erased.

#### *Note*


*Data is not removed from internal Recorder memory until you erase it using Power View software on the PDA or Power Analyze software on your PC.*

### **Power Type Diagrams**

The wiring illustrations included cover the standard power configurations that are selectable in Power View or Power Analyze software. The diagrams are provided as an aid in making the correct test lead connections. Power type diagrams are also included on your PDA and can be referenced when you are setting up nominal power on the Recorder.

Available power type settings are:

- One-Phase Plus Neutral (Figure 4)
- One-Phase IT No Neutral (Figure 5)
- One-Phase-Split Phase (Figure 6)
- Three-Phase Wye (Figure 7)
- Three-Phase Delta (Figure 8)
- Three-Phase IT (Figure 9)
- Three-Phase High Leg (Figure 10)
- Three-Phase Open Leg (Figure 11)
- 2-Element Delta (Figure 12)
- 2 ½-Element Wye (Figure 13)

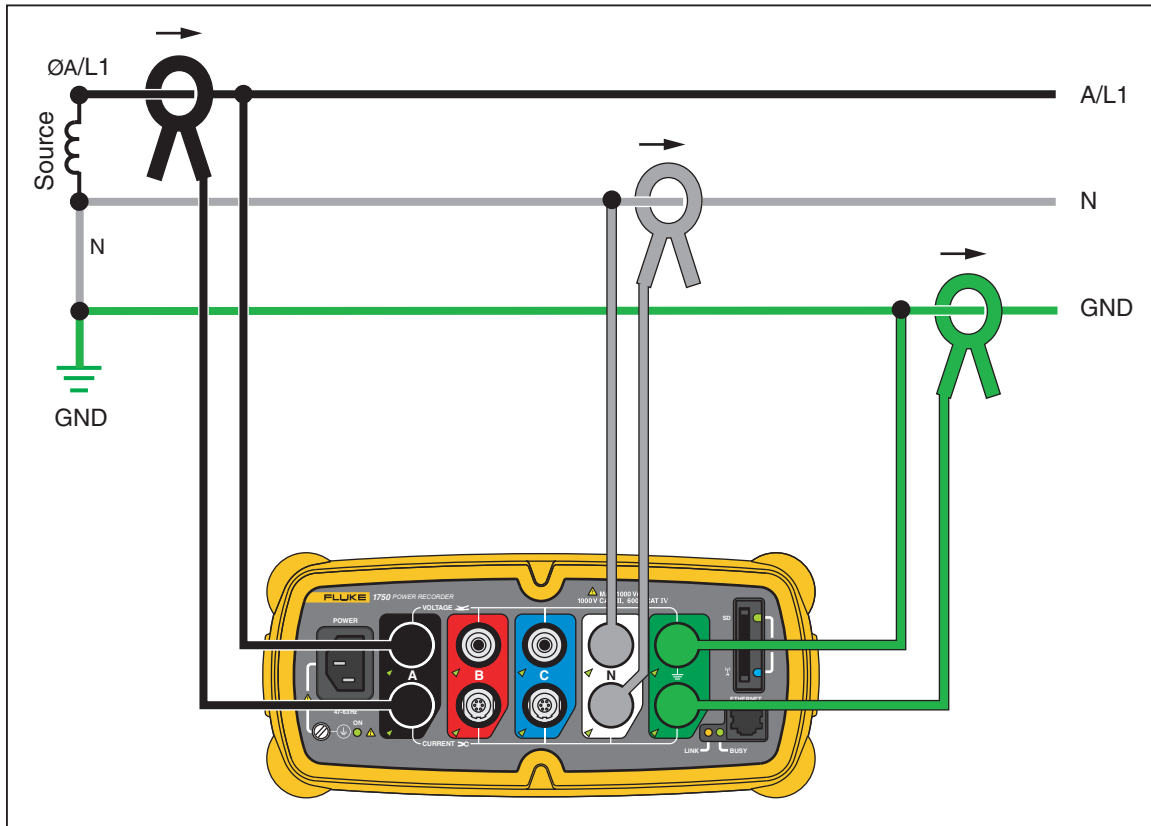

azd02f.eps

**Figure 4. One Phase Plus Neutral**

Example: Branch circuit at an outlet.

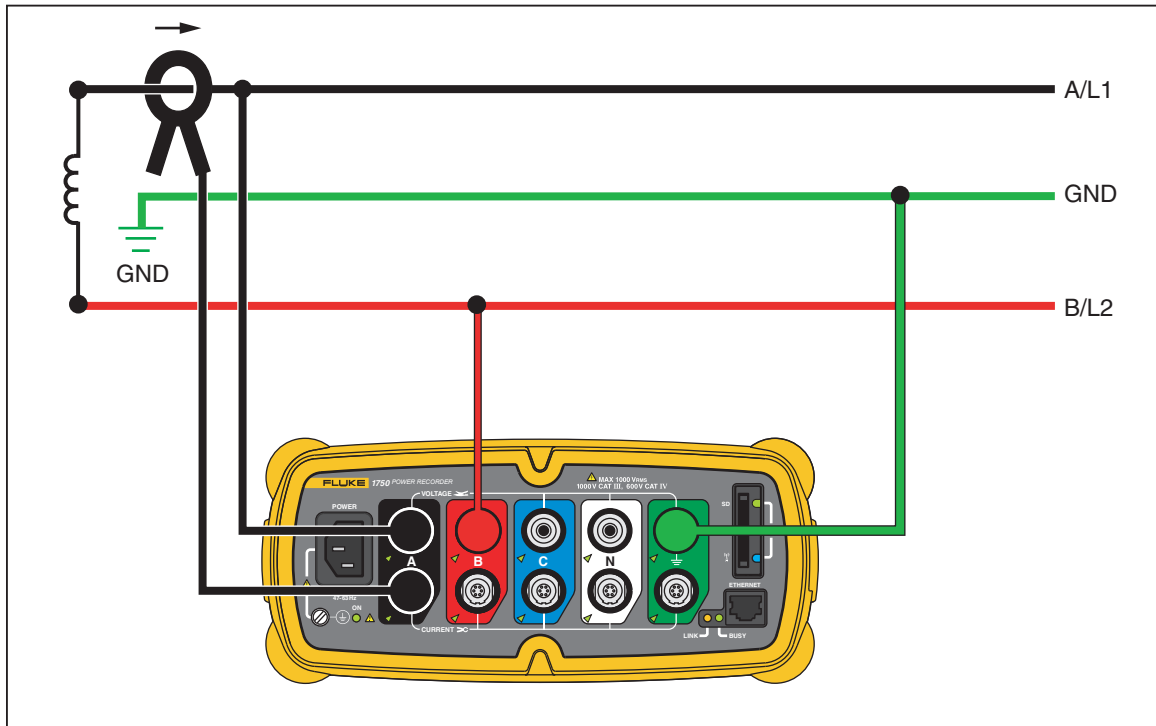
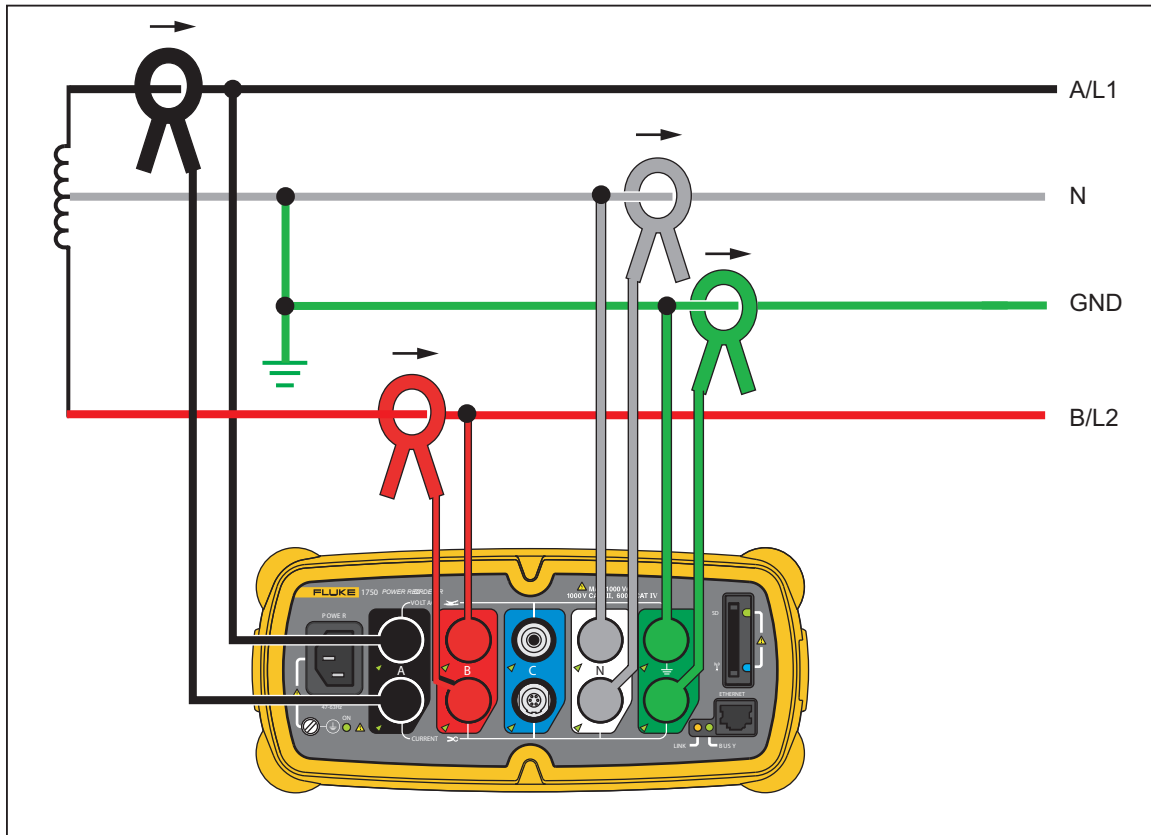


Figure 5. One-Phase IT No Neutral

azd14f.eps

Example: Used in Norway and in some hospitals. This would be the connection at a branch circuit.



**Figure 6. One-Phase Split Phase**

azd03f.eps

Example: A North American residential installation at the service entrance.


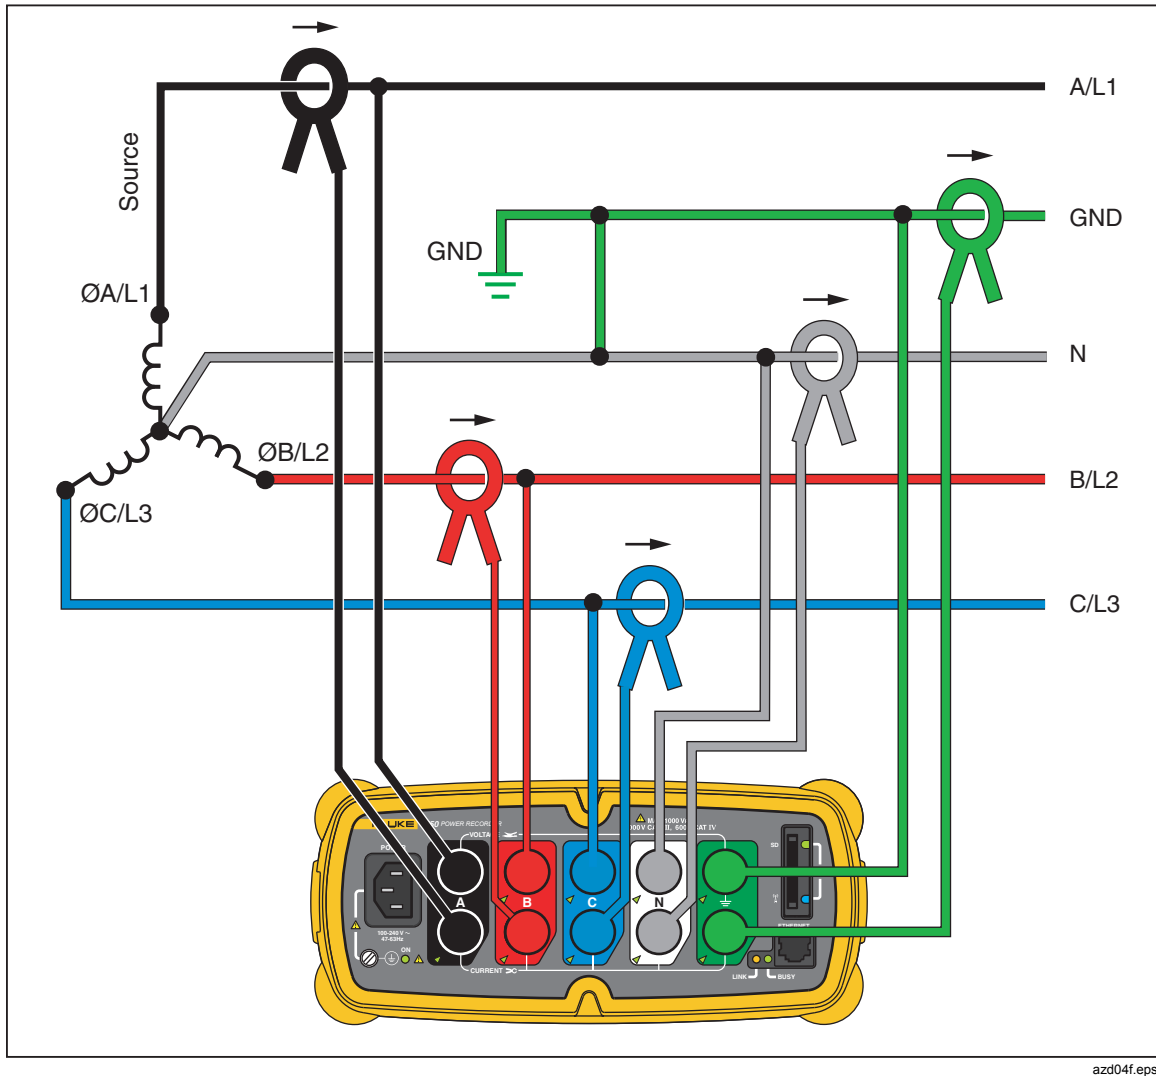


Figure 7. Three-Phase Wye

azd04f.eps


Example: Also called “Star” or four-wire connection. Typical commercial building power.

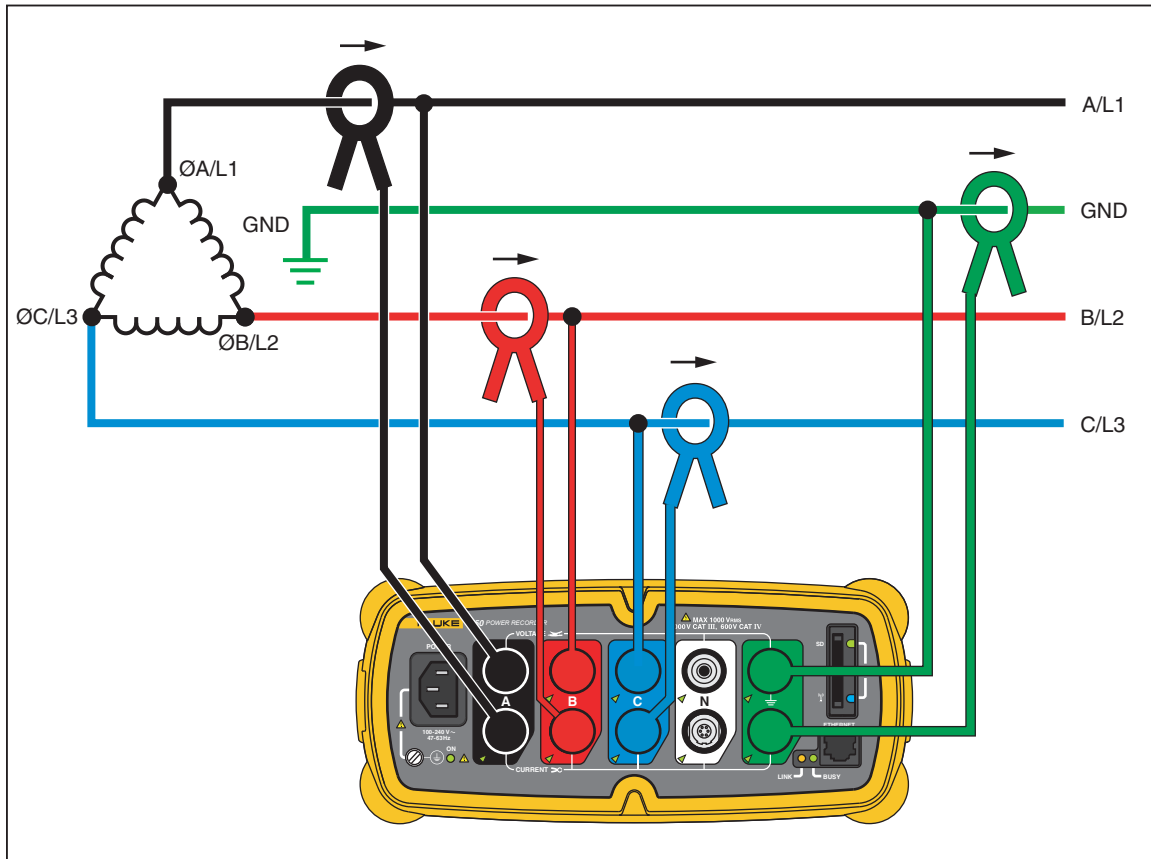

azd05f.eps

**Figure 8. Three-Phase Delta**


Example: Often found in industrial settings where electric motors are used.

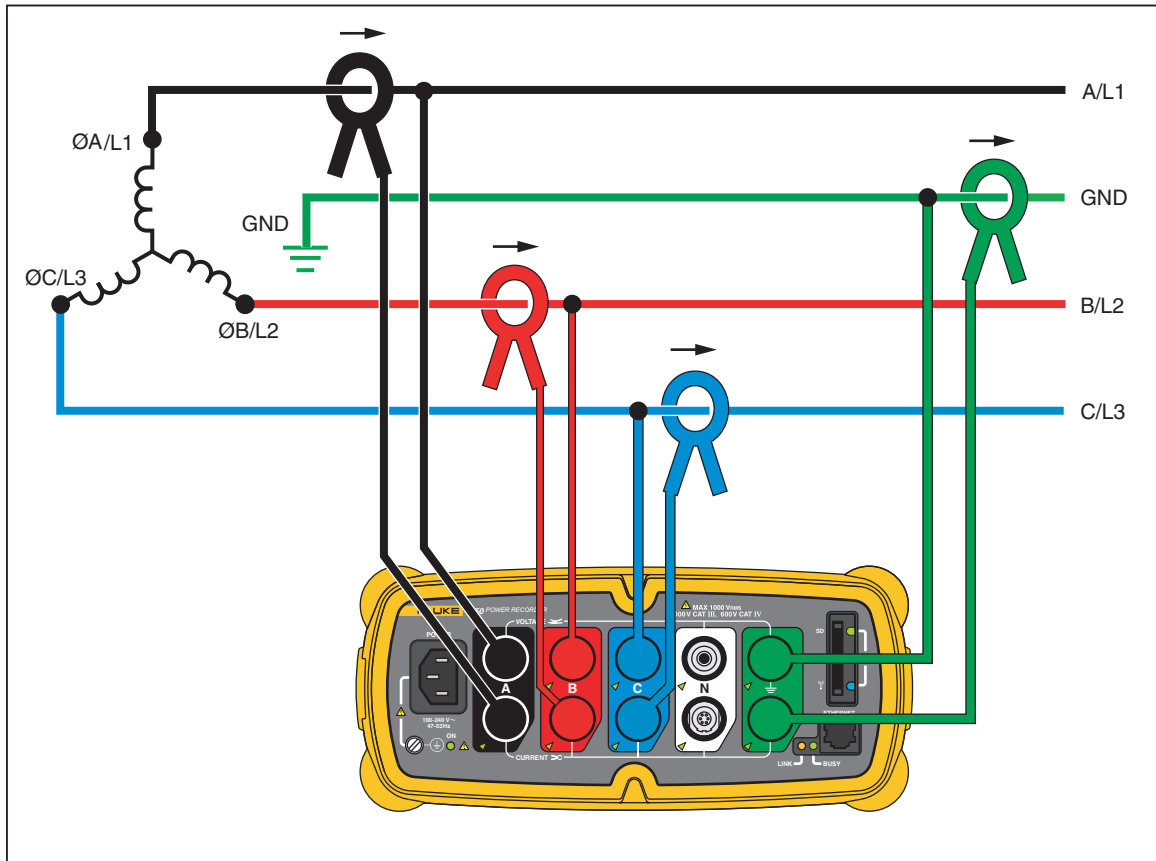

azd12f.eps

**Figure 9. Three-Phase IT**

Example: Industrial power in countries that use the IT (Isolated Terra) system, such as Norway.

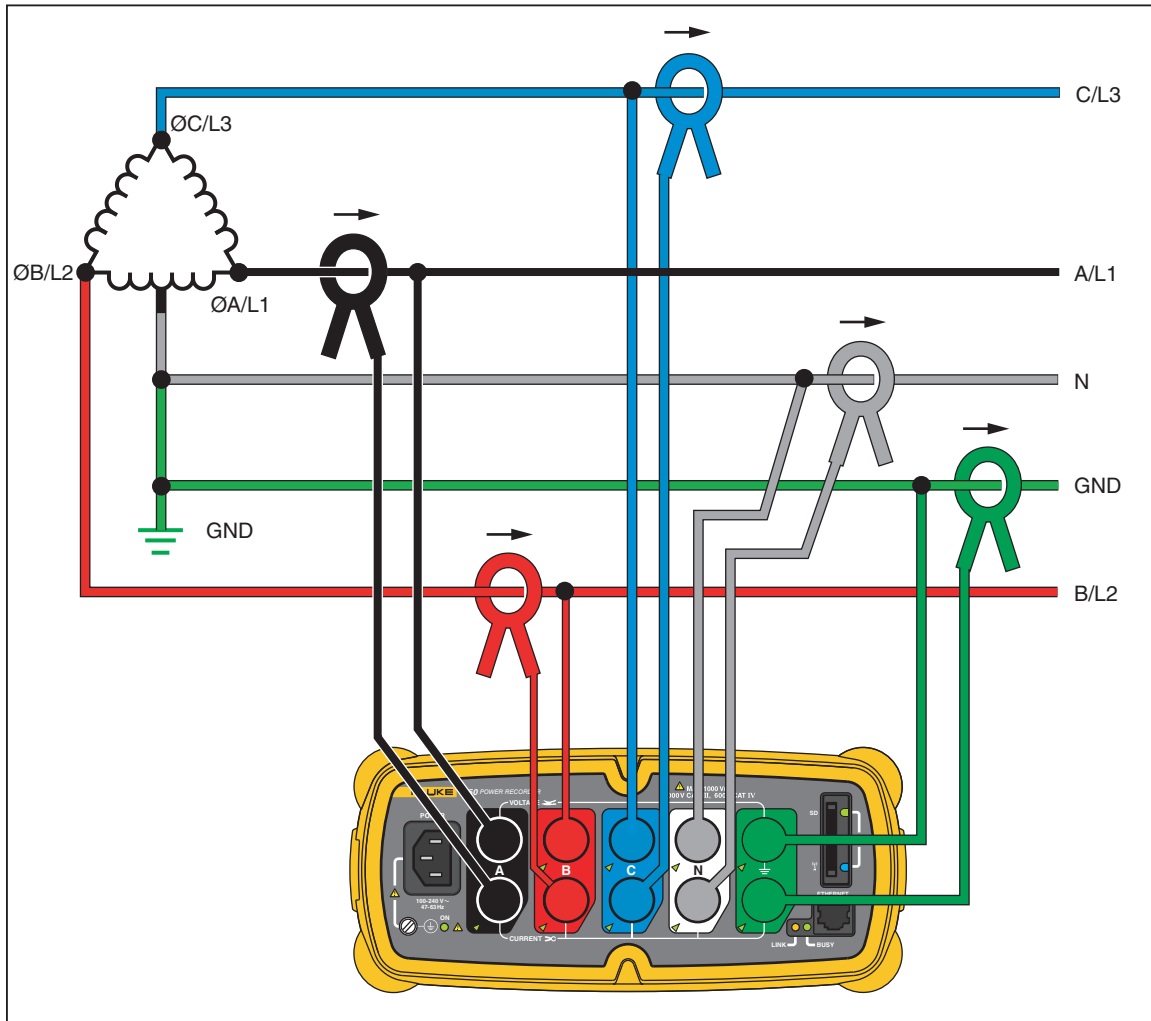

azd08f.eps

**Figure 10. Three-Phase High Leg**

Example: A way to get a 120 V single phase feed by tapping across part of a leg in a delta power system


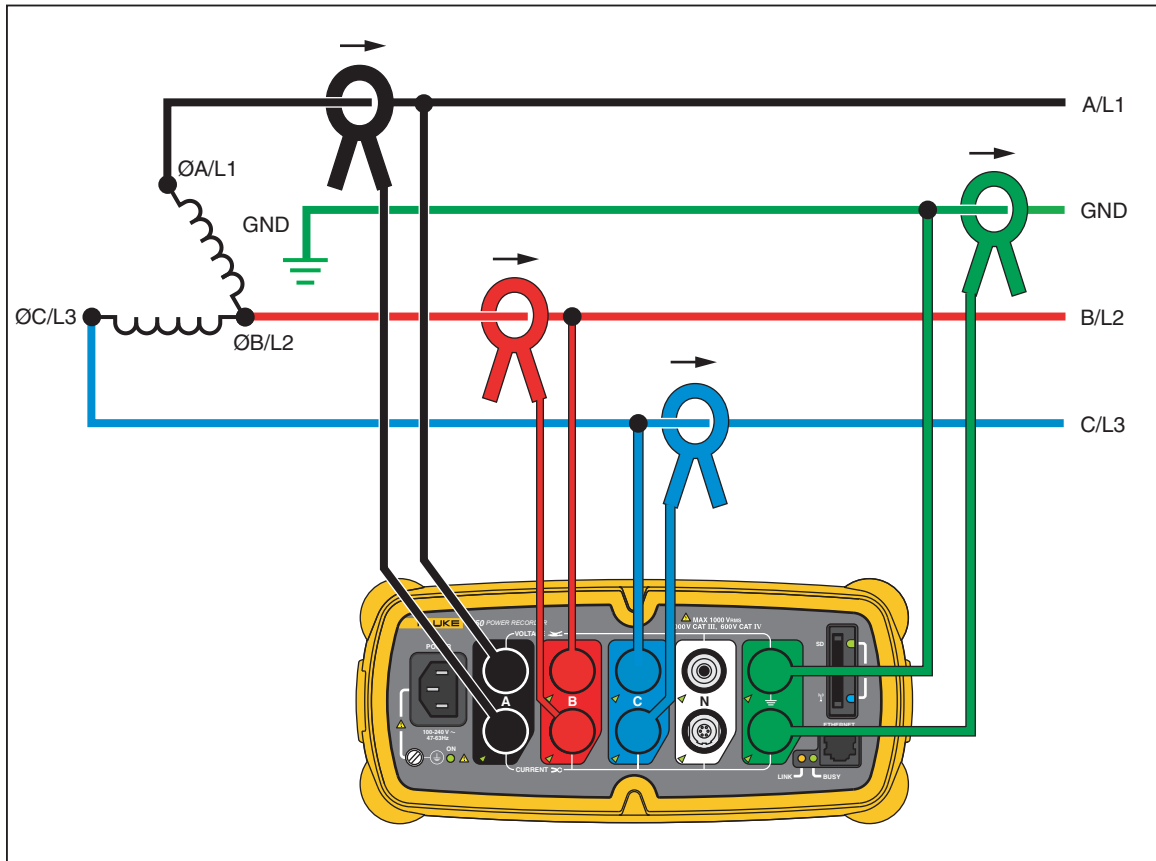


Figure 11. Three-Phase Open Leg

Example: A variant of power transformer winding type.

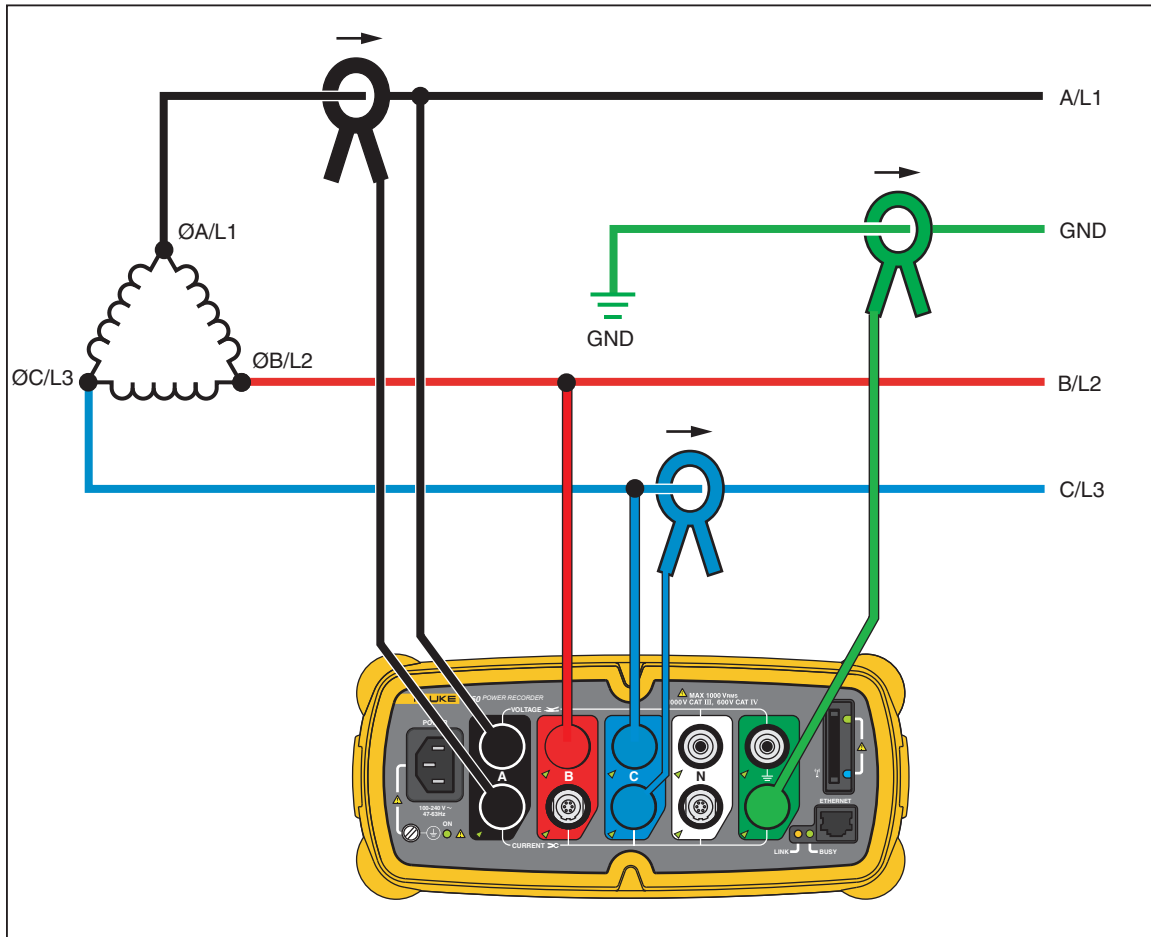

azd13f.eps

**Figure 12. 2-Element Delta**

Example: Blondel or Aron connection, used to measure power like a two-element revenue power meter.

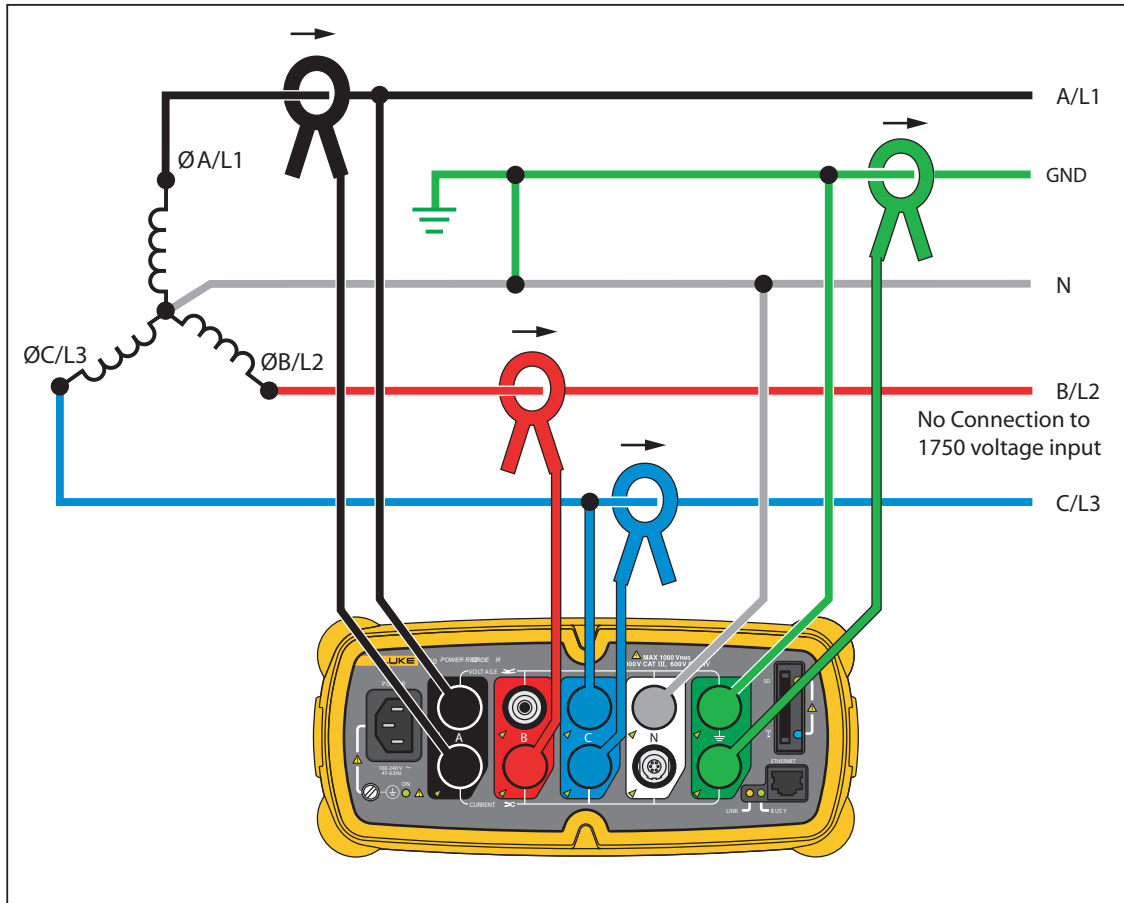


Figure 13. 2 1/2-Element Wye

azd07f.eps

Example: Blondel or Aron system for 4-wire (Wye) power secondaries.

## Communicating with the Recorder Using Power View

The PDA serves as your control panel for the Recorder. The Power View software installed on the PDA is designed to function as a remote front panel for the Recorder, since the Recorder itself is a “black box” with no integral display or external controls other than status LEDs. With Power View installed on the PDA, you are relieved of the burden of having to carry a laptop and Ethernet cable to a remote site when setting up the Recorder, checking its progress, or finishing a monitoring session.

You can alternatively connect to a Recorder from a PC directly using an Ethernet cable or remotely over an IP network. You can then use Fluke Power Analyze to set up the Recorder, view power measurements wherever the Recorder is installed, or download data from the Recorder.

Power View communicates with the PDA using a wireless controller radio interface. There is no provision for a hardwired PDA interface to the Ethernet port on the Recorder. After data is recorded and downloaded to a PC, you can analyze the recorded data using the Power Analyze software.

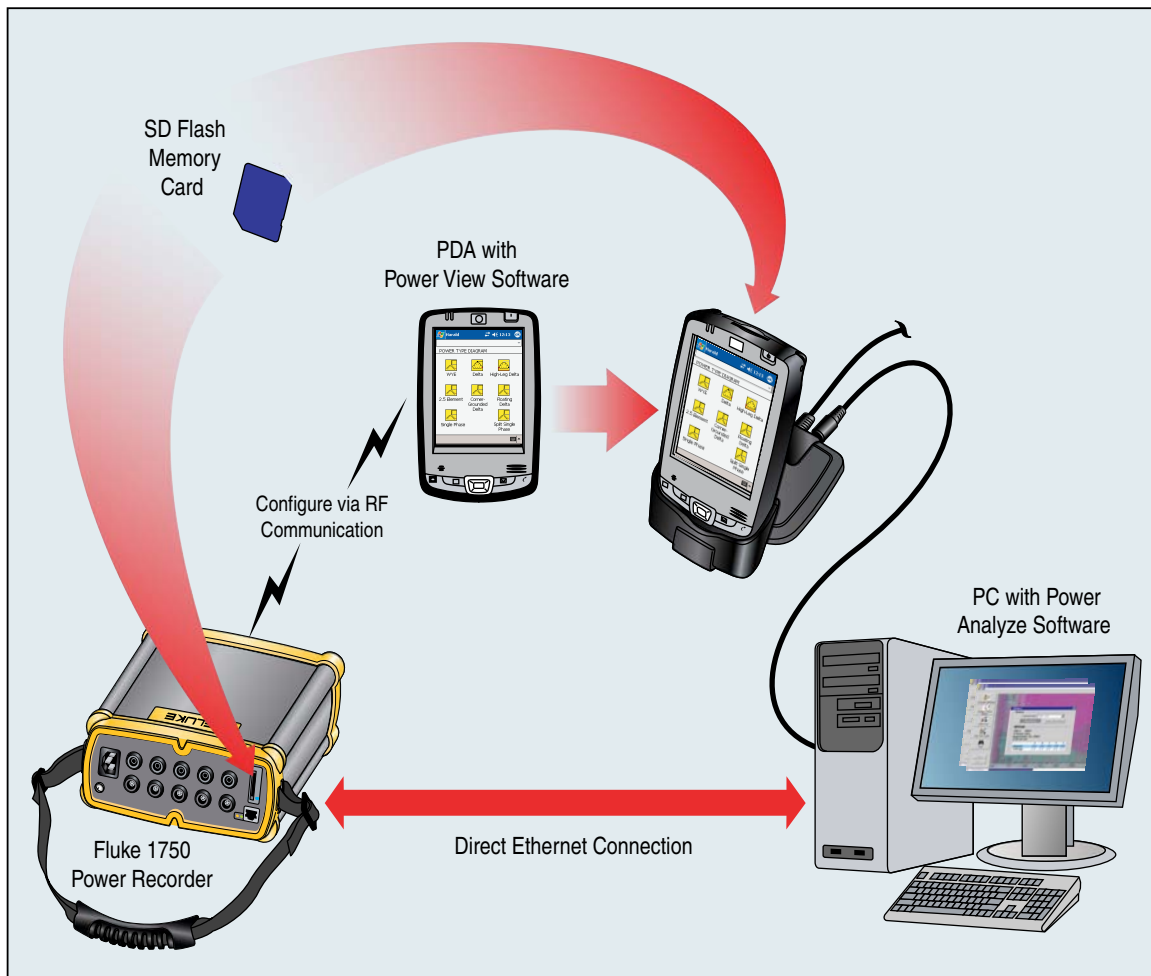


Figure 14. Connecting to the Recorder

azd01f.emf

## **Navigating in Power View on the PDA**

The Menu Bar on the bottom of the Power View screen allows you to quickly and easily configure a Recorder, view live data, and transfer data to the Secure Data (SD) card for viewing and analysis on your desktop computer using the companion Power Analyze software.

### **Power View Menus**

#### **Live**

Brings up a list of the live detail views: Scope, Meter, Phasor, Harmonics, and Trend. There are configurable detail views of each type of screen available by tapping the sector of interest or the Live menu. Once a detail view is selected, navigation to all available detail views is accomplished using the Live menu.

**Menu > Tools** opens the Data Memory Management screens and the Shut Down command to turn off the Recorder. Data Memory Management has screens for downloading to the SD card inserted in the Recorder, erasing the Recorder's internal memory, and erasing the SD card files.

**Menu > 1750 Setup** brings up the setup screen that allows you to configure the Recorder and set recording period information. Using this function, you can tap the appropriate icon to set the following:

- Clock
- Probe Detect
- IP Address
- Measurement Description
- Nominal Power
- Phase Swap
- Volts/Current Ratio
- Recorder Name/Password
- Snapshot Period
- Language

### Icons on the Menu Bar

 and  are used to toggle between voltage and current wave forms. Tap either V or A and then Live>Home to see each parameter's detailed data. The PHASOR screen always shows both V & A (volts and amps).  is replaced with  on the detail views, as voltage and current data can be viewed simultaneously.

In all the detail live view screens, a line selection menu is available using the  button at the bottom. This is a checkbox that is used to select the voltage and current channels you want to display.



The Snapshot icon triggers the Recorder to capture high-resolution waveform data and save it in the recorded data stream. This waveform capture is identical to the snapshots taken automatically when you set the “snapshot period” in the 1750 Setup menu.



This icon brings up the Annotate screen. Use the annotate menu to enter text or to insert a file name and load it into the recorded data stream in the Recorder. Annotations can be used to make notes, or to insert a file name of an image or audio file. You can enter multiple start and stop annotations. START and stop annotations are not paired and are not restricted to being used as literally “start” and “stop”. Annotations are often done at the start of a power recording session.

## Menu Tree

The following figure provides an overview of the Power View menu structure that will be helpful in navigating through the Power View application.

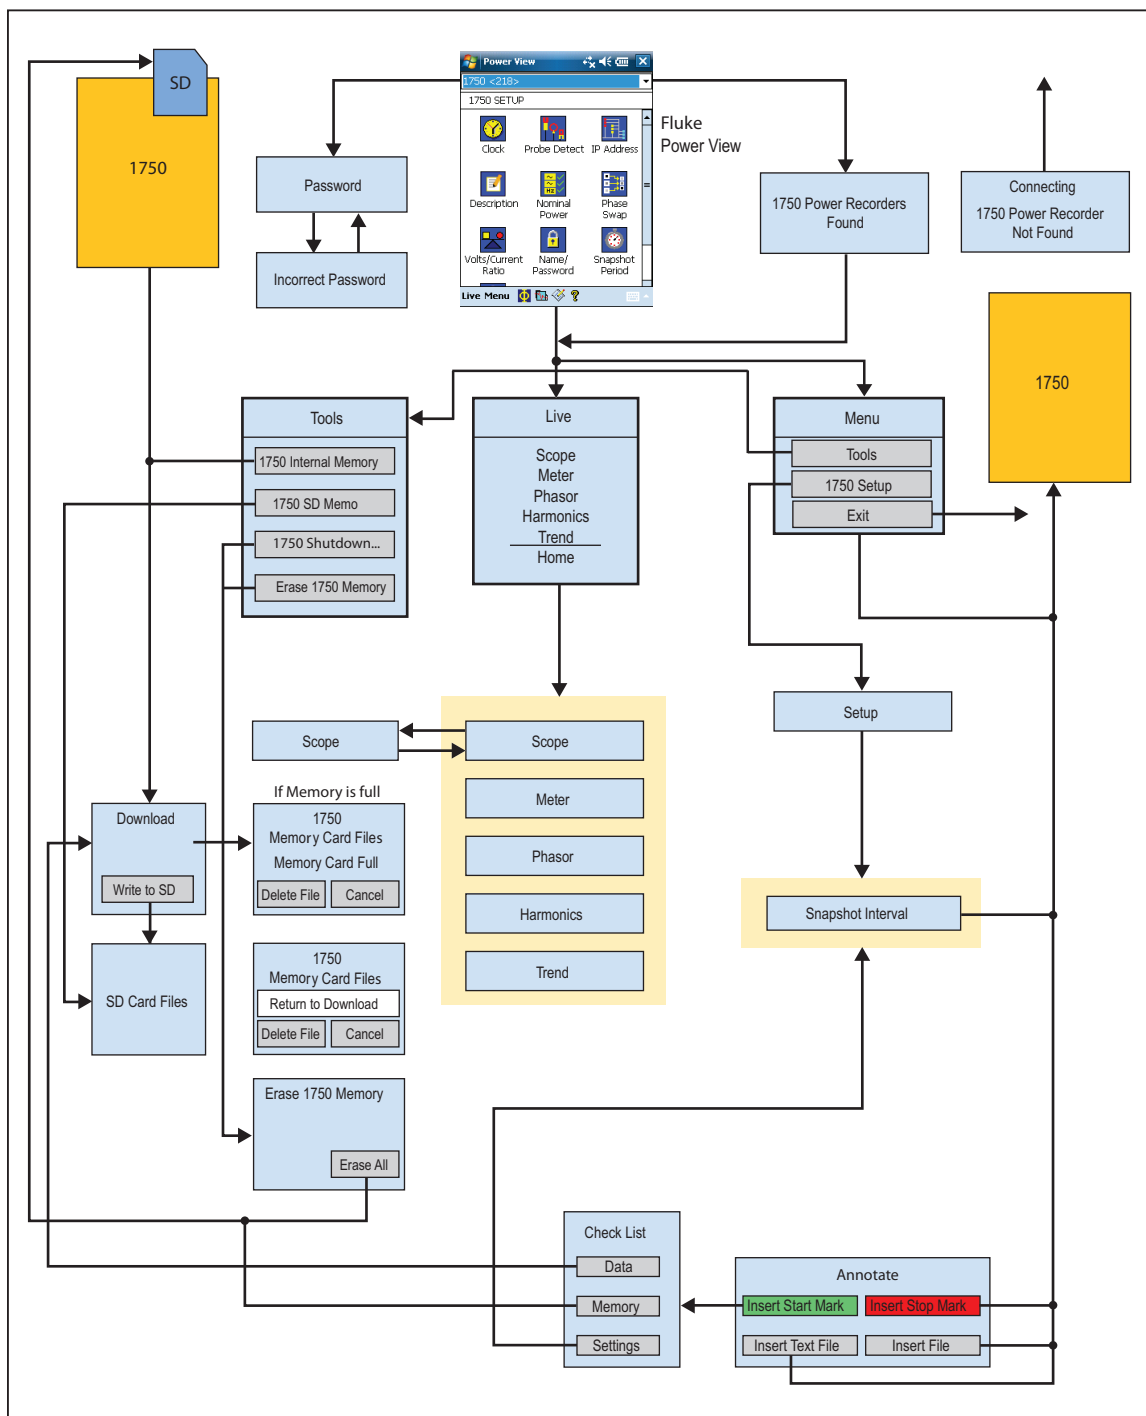



Figure 15. Power View Menu Tree

azd15f.eps

## Home Screen


The Home screen is the top-level screen, accessed when you start Power View or when you tap Live and then Home on the Menu Bar.

The **Home** screen contains a 1.5 cycle waveform screen, a digital meter screen, and a PHASOR screen. The parameters shown in this screen are not configurable. All phases are shown simultaneously, either all voltage or all current.

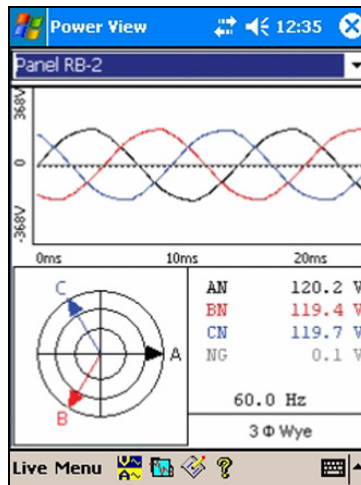


azd111.bmp

If no Recorders are within range, the following screen appears:

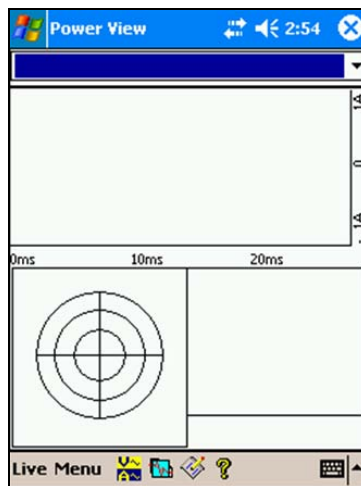


azd112.bmp

If more than one Recorder is within range, the Recorder selection screen appears. An asterisk preceding the Recorder name means that unit is password protected. If your recorder is not listed, but in range, press "Search New Devices" to update the list.

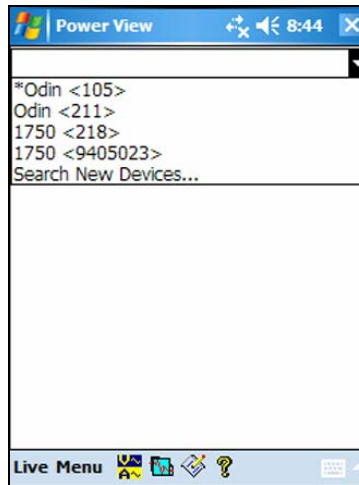

azd113.bmp

If the selected Recorder is not password protected, the Home screen appears. If password protection is set, the Password screen appears instead.

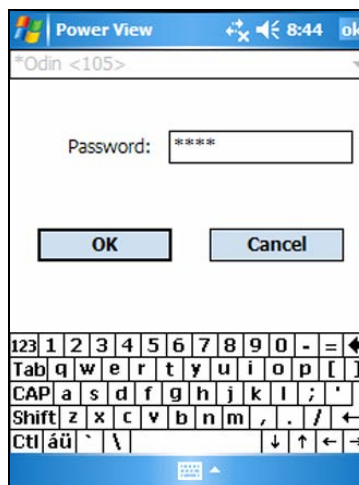

azd114.bmp

If the password is incorrect the password text field is cleared and then you can re-enter the password. When the password is accepted, the Home screen appears.

*Note*

*A screen to set up password protection for a Recorder is provided in the **1750 Setup** menu.*

## **Downloading Data and Erasing Memory**

Use the Data menu options to manage the Recorder memory and download recorded data to the SD card plugged into the Recorder's (not the PDA) SD card slot. You are downloading recorded data from the flash memory to an SD card in the Recorder. You can later copy the data to your PC for review using the Power Analyze software.

### **Auto Download**

The Auto Download feature copies all recorded data to the SD card without a PDA or PC. Auto Download starts when you insert the SD card and have no connection to Power View or Power Analyze. The SD card status indicator flashes while a copy of the data moves to the SD Memory card.

*Note*

*Do not remove the SD card while the SD status indicator is flashing. It may result in corrupted data integrity of the SD card. The SD card can be safely removed when the SD status indicator is off.*

The automatic download can be aborted with Power View by either tabbing on **Menu>Tools>1750 Internal Memory** or **Menu>Tools>1750 SD Memory**.


If the download does not start automatically:

1. Verify that neither Power View nor Power Analyze is connected to the device.
2. Watch the SD status indicator. As soon as an SD card is inserted, the indicator flashes green for a short time. This is the indication that the device has recognized the SD card. If nothing happens the SD card is not compatible with the Fluke 1750.
3. Check if the SD card is write-protected. Make sure the slider on the card is not in the LOCK position.

If the SD status indicator flashes when the SD card has been inserted but it does not flash for a longer period of time (>1 second) the available space might be insufficient. Use a new card without any files or delete files on the SD card with the use of the PDA or a card reader.


## PDA Download

Tap **1750 Internal Memory** in the Data menu to view the Download screen.

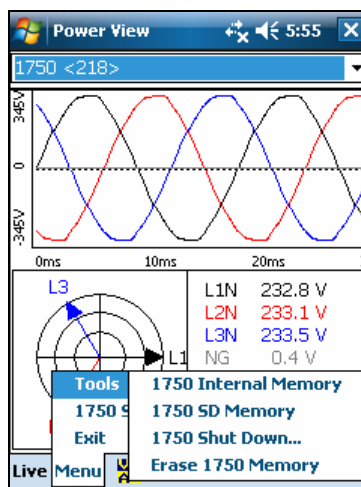


azd116.bmp

The Download screen shows a three-phase rms V strip chart with date and timescale shown. This represents the data in the Recorder internal memory. The default settings of the start and stop times is everything in memory. To download ALL, tap the **Write to SD** button. If you want to trim off data that contains partial information because probes were being connected, select the START mark annotation (if one was entered by the user) as The gray cursor lines right and left with triangular arrowheads at the bottom of the screen show the start and stop times currently selected for download. Green and red flags are START and STOP mark annotations inserted during the recording session. Yellow flags are file name annotations inserted during the recording session, or setup parameter changes that change the data significantly, such as nominal voltage or power type.

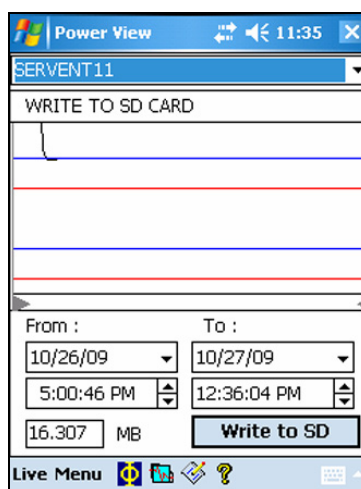

azd117.bmp


If the SD storage card already contains data files, it may not have room for the new download. Power View alerts you to this condition and asks if you would like to erase the SD card before downloading.

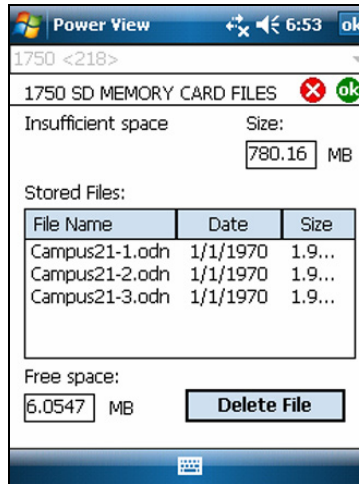

azd107s.bmp


You can also access the SD card to delete files by selecting **Menu>Tools>1750 SD Memory**.

You can delete files as necessary, and when satisfied that there is room on the card, proceed to write the selected internal Recorder memory data to the SD card.

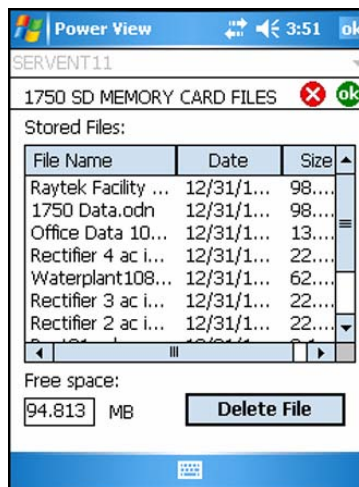


azd108s.bmp

When there is room on the card, a message confirming the download will appear.

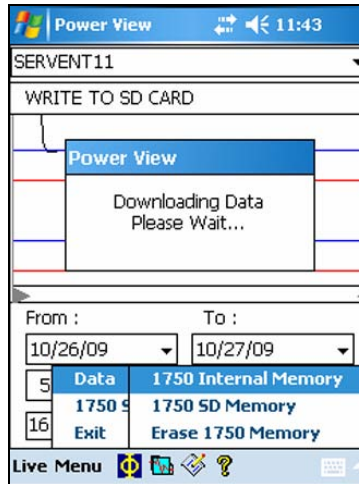


azd118.bmp

You can also tap the **Erase 1750 Memory** from the Data menu option which is available under **Menu**, and tap the **Erase All** button to erase all power quality data stored in the Recorder. Even then, if you want, you can leave old data in Recorder memory. It will be overwritten automatically when you start your next Recorder session, so it never has an adverse effect on recorded data quality or quantity.

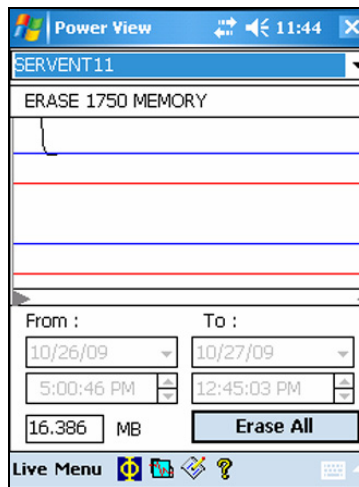

azd109s.bmp

When you choose to **Erase All**, the following popup caution “Are you sure?” appears on the screen.

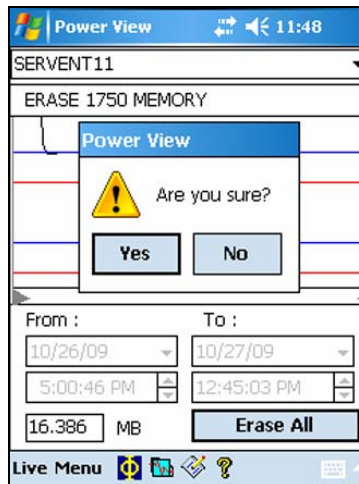


azd119.bmp

### Note

*You can also download data by connecting your PC directly to the Recorder with an Ethernet cable and run Power Analyze in the 1750 Live mode. All of the functions (controller, PDA, and Power View) are duplicated in 1750 Live mode.*

## Viewing Live Data


The **Live** menu is used to view live data on the circuits on the circuits for example, Scope, Meter, Phasor, or Harmonics.

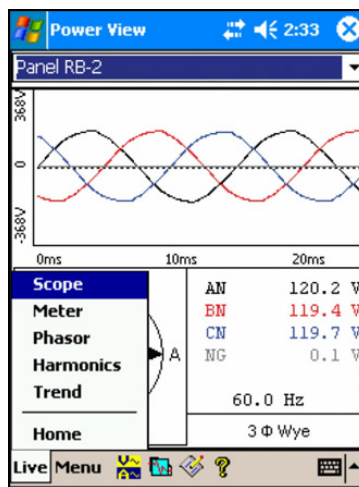

azd120.bmp

## Scope Screen

The **Scope** screen shows 1.5 cycle waveform data for the volts and amp lines selected in the check boxes on Phase View screen. Tap the Phase icon ( $\Phi$ ) to display the Phase View screen.

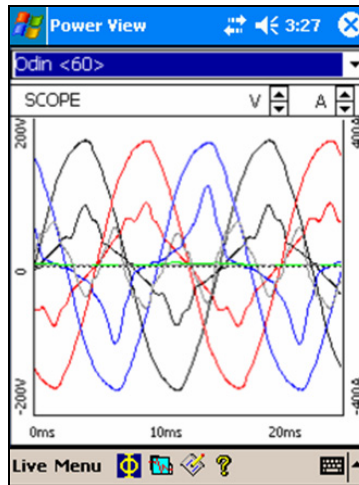

azd121.bmp

## Meter Screen

The **Meter** screen shows numeric readings for all selected phases.


| METER   |       |       |       |      |
|---------|-------|-------|-------|------|
| VOLTAGE | AN    | BN    | CN    | NG   |
| V RMS   | 118.5 | 117.9 | 118.8 | 0.1  |
| V PK    | 170.2 | 170.5 | 169.2 | 0.5  |
| CF      | 1.4   | 1.4   | 1.4   | 3.4  |
| %THD    | 0.0   | 0.0   | 0.0   | 9.6  |
| CURRENT | A     | B     | C     | N    |
| A RMS   | 28.5  | 23.5  | 24.4  | 18.2 |
| A PK    | 53.6  | 43.2  | 55.0  | 34.7 |
| CF      | 1.9   | 1.8   | 2.3   | 1.9  |
| %THD    | 0.2   | 0.2   | 0.5   | 2.5  |
| POWER   | A     | B     | C     | N    |
| kW      | 3.3   | 2.7   | 2.6   | -0.0 |
| kVA     | 3.4   | 2.8   | 2.9   | 0.0  |
| kVAR    | 0.7   | 0.5   | 1.3   | 0.0  |
| PF      | 1.0   | 1.0   | 0.9   | 0.1  |

azd122.bmp

## Phasor Screen

The **Phasor** screen shows voltage (long arrows with solid arrowheads), current amplitudes, and phase angles. This screen is used to verify proper test lead and current probe connections. You can use the V and A arrows on the upper right of the screen to change the scaling of voltage and current on the PHASOR diagram.

You can easily correct an erroneous Recorder connection by going directly to **Menu\1750 Setup\Phase Swap** (🔧) and using the Recorder to internally invert a CT, swap a voltage or CT phase, or modify a scaling parameter, then return to the screen to verify that the correction has been made. There is no need to touch the cables. See “Phase Swap” later in the manual for additional information.

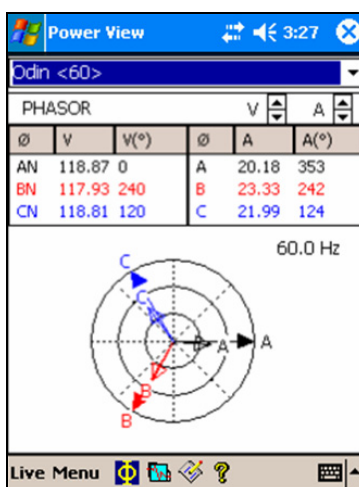


azd123.bmp

## Harmonics Screen

The **Harmonics** screen shows the magnitudes of the selected phases of V and I. The scale is % of nominal.

The slider control displays harmonics of a higher order up to the 50<sup>th</sup>. The V and A scaling arrows are on the screen in the upper right.

If the power type is delta, V phases are AB, BC, and CA (L1L2, L2L3, L3L1 is available as a localized European labeling scheme). If the power type is Wye, V phases are AN, BN, CN, and NG. (N = neutral, G = ground).

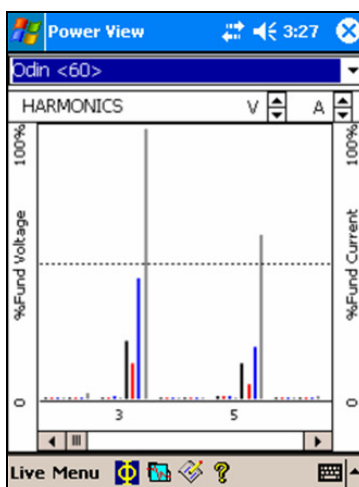


124.bmp azd

## Trend Screen

The **Trend** screen shows live data being recorded as a strip chart display of the selected phases of voltage or current. This moment in time is visible on the right side of the graph.


The traces fill the screen in 10 minutes, and continue FIFO (first-in, first-out). This feature is intended to paint a picture of the short-term stability of the power system. The V and A scaling arrows on the upper right work like the scaling arrows on the PHASOR screen.

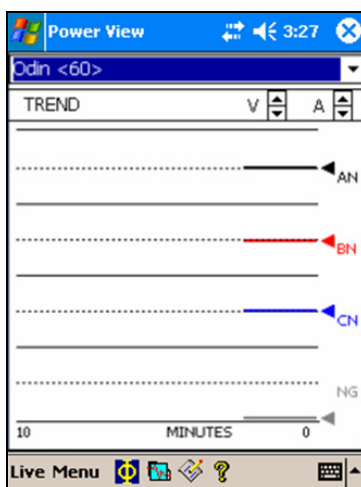

azd125.bmp

## Viewing Phases


In all the detail Live View screen, a line selection menu is available using the  $\Phi$  button at the bottom. The Phase Selection screen reveals check boxes for selecting the voltage and current channels you want to display.

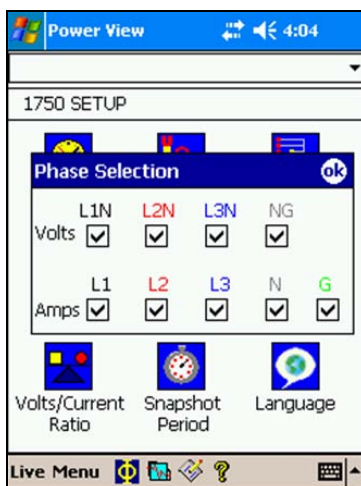

azd126.bmp


## Setting Up the Recorder

To adjust the settings of the Recorder, tap **Menu>1750 Setup**.

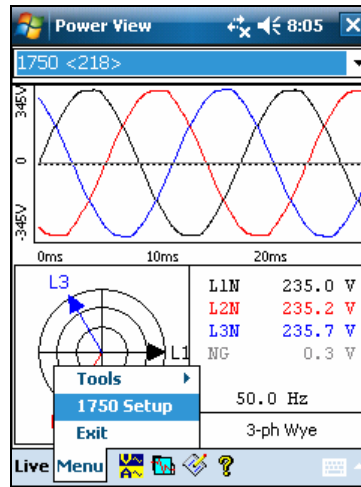

azd127.bmp

The Setup screen shows setup options.

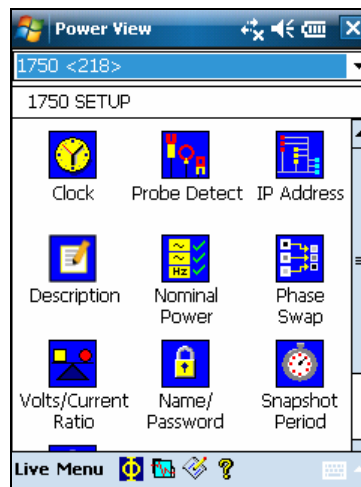


azd140.bmp

From the Setup screen, you can adjust either the recording period information or the Recorder settings. Tap an icon on the Setup screen to view or configure:

- Clock
- Probe Detect
- IP Address
- Measurement Description
- Nominal Power
- Phase Swap
- Volts/Current Ratio
- Recorder Name/Password
- Snapshot Period
- Language

## Setting the Clock


Use this feature to set the PDA clock or clock to synchronize the Recorder with the PDA clock.

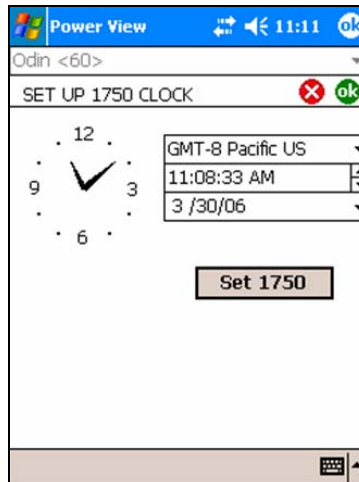

azd128.bmp

## Probe Detect


This screen shows the types of probes attached to the Recorder current inputs. Current probes are automatically detected.

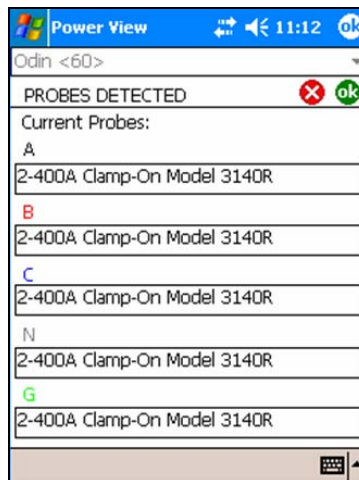

azd129.bmp

### Setting the IP Address

Select **Obtain Address Automatically** unless your company's IT department has specific requirements that require assigned IP addresses. When this mode is active, the assigned IP Address and Subnet Mask show in gray. The Default Gateway address is not supported and this field always defaults to 0.0.0.0.

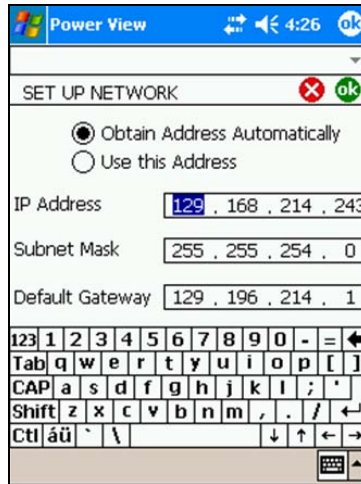

azd130.bmp


### Adding a Measurement Description

Click on the arrow and select one of the six available captions from the list box and enter the text in the text field below. The number of characters is limited to 50. Click on **Insert** to apply the changes.

You may change or delete the caption. The maximum possible length for caption text is 20 characters.

To apply changes, click on **Apply**.


Click **OK** to close the window and send the measurement description to the device.

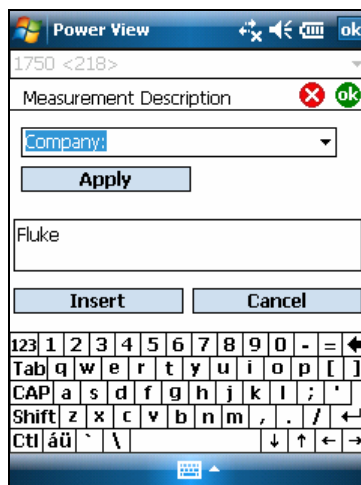

azd141.bmp

## Configure Nominal Power Values

This window contains the setup for Power Config, Nominal Voltage, and Frequency. It is important to correctly configure these values before the measurement as some calculations are based on these settings and cannot be recalculated after the measurement has been performed. Click on the 3-phase delta icon to display the wiring diagram of the selected topology. The list box of nominal voltage levels contains commonly used voltage levels. Different voltage levels may be entered if required.

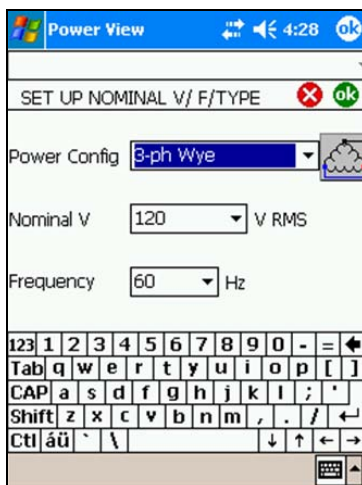

azd131.bmp


## Using Phase Swap

Rather than having to change the physical connections to the power system, use the Phase Swap feature to make a software-selectable correction without physically switching the cable. You can select from the following:

- Swap any voltage input
- Swap any current input
- Invert any current input clamp

The screen shows check boxes to invert any current probe. Current probes are directional, and selecting “invert” has the effect of removing the probe and turning it around.

If the power type is delta, V phases are AB, BC, and CA (L1L2, L2L3, L3L1 is available as an optional setting). If the power type is Wye, V phases are AN, BN, CN, and NG. (N = neutral, G = ground).

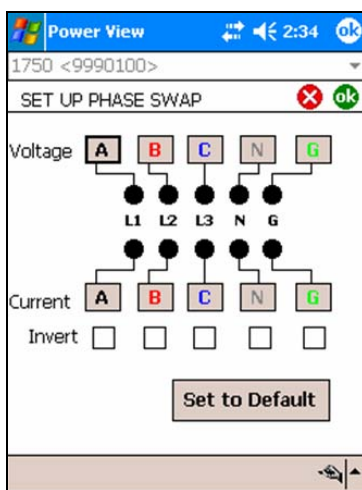


azd133.bmp

### Setting the Volts and Current Ratio

Use this menu to add a ratio factor to the voltage or current input on each phase. Changing the first “1” in each case if there is a potential transformer in series with the voltage connection such as when you want to monitor a medium-voltage network using PTs and CTs to scale the voltage and current to a convenient level for measuring instruments.

The current ratio applies a ratio to the current input in order to show the current present on a medium-voltage network. This feature is intended to be used for sensing low levels of current to represent the much higher levels on the primary side at a substation or step-down transformer that has built-in metering current transformers.

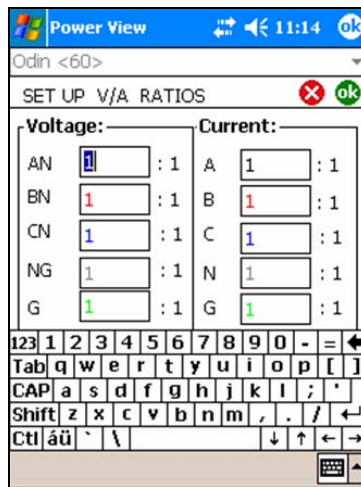

azd134.bmp

### Assign Recorder Name and Password

Use this feature to assign a name identifier to the Recorder and to establish a password for the Recorder. This naming feature is designed to help you keep track of which Recorder is in use. The Recorder name is later associated with the data file that you download from the Recorder.



azd132.bmp

## Setting the Snapshot Period - Periodic Waveform Capture Setting

Use the Snapshot Period screen to program the Recorder to take automatic power conditions readings which are then stored in the recorded data stream. These snapshots contain a phasor diagram, waveforms of current and voltage, harmonics profiles, and other data.


- None
- 10 minutes
- 30 minutes
- 1 hour

### Note

You can take a snapshot manually at any time at any time while connected over the wireless link to a Recorder. Press the Waveform icon  on any of the View screens to take a snapshot. The message, "Snapshot Acquired" confirms that a snapshot was taken.




azd135.bmp

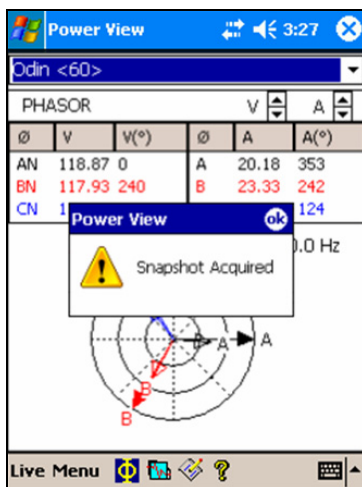

azd139.bmp

### Change Display Language and Phase Identifier


Power View features a localized user interface for English, German, French, Spanish, Chinese, and Italian. Select one of these languages and select your preference of phase identifier as A, B, C or L1, L2, L3. A restart of Power View is required to apply these changes.

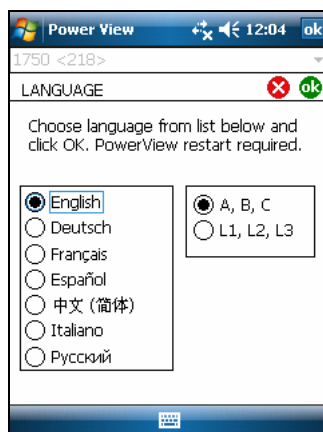

azd142.bmp

### Working with Annotations

Annotations are optional markers that can be inserted by the Recorder operator to flag a particular point in the data when recording. They are usually inserted on using Power View with the wireless PDA.

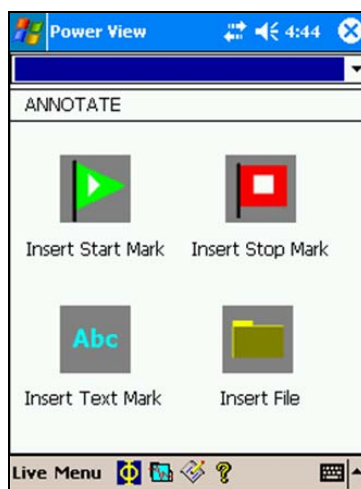

azd137.bmp

There are five types of annotations:

- START annotation (green)

The START annotation can be used to signify where important data begins. For example, the operator might want to establish a start annotation after having finished all probe connections and instrument setup, to indicate that any preceding data was preliminary.

*Note*

*You are not limited to using the START and STOP annotations in pairs, or to show a range of data. You can use each as many times as desired to mark a particular point during recording.*

- STOP annotation (red)  
The STOP annotation can be used to signify where important data ends.
- File annotation (yellow)  
File annotations contain the name of a picture or audio file relevant to the data. See “Using Image or Voice Annotations” later in this manual.
- Text annotation  
Text annotations contain a text note.
- Power Configuration Change annotation  
Power Configuration Change annotations are inserted by the system when a change is made to the Power Configuration in the Recorder. These markers only display in the Download dialog box.

To show or hide annotation markers:

- In the Volts/Amps/Hz or Events view, check or uncheck the Annotations option on the view controls.

To open an annotation:

- In the Volts/Amps/Hz view, Events view, or Download dialog box, click on the annotation.  
  
If the annotation is associated with an audio (.WAV) or image (.jpg) file, the application associated with that file will start and open the file. If the file is not in the default directory `\My Documents\Fluke\Power Analyze`, a dialog box opens so that you can navigate to the file.

*Note*

*If clicking on an annotation marker does not seem to do anything, the Zoom box is probably selected in the graph toolbar, instead of the Select tool. Click the Select tool and then select the annotation.*

To see overlapping annotations:

Sometimes annotations are so close to each other that they actually overlap on the Volts/Amps/Hz reference graph. When this is the case, if you click on overlapping annotations, a menu opens and you can select either Open, to open the annotation now on top, or Select Next Overlapping Annotation, to bring the next one to the top.

- To open the annotation now on top, choose Open.
- To bring the next annotation to the top, choose Select Next Overlapping Annotation. To then open that annotation, click on it again and choose Open.

*Note*

*To see overlapping annotations more clearly on the Volts/Amps/Hz reference graph, move the selection cursors so that they just surround the area that contains the overlapping illustrations. The Detail graph adjusts as the cursors move, zooming in to show the area between the selection cursors. You can now see the annotations separately.*

### **Using Image or Voice Annotations**

While you are monitoring data with a Recorder, you may find it helpful to take a picture that relates to the power quality data you are recording, or to record verbal comments as you observe the conditions or review the data being measured. You can then associate the image or recording with the data being recorded by adding annotations that reference them.

The PDA includes a microphone for recording notes which are saved as .WAV files, and an optional camera accessory is available on the PDA which will capture images as .jpg files.

You can associate both images and audio files with the data being gathered in the Recorder by inserting annotations and specifying the name of a .WAV or .jpg file. After you download data from the Recorder, you can then move the image and audio files to the PC along with the recorded data (.odn) file.

#### *Note*

*You can also associate other types of files with the annotation. For example, if you had a .MPG file with a movie, or a .DOC file with associated information. You can enter any file name using this annotation method.*

### **Inserting Image or Voice Annotations**

1. Set up the Recorder and begin monitoring.
2. Using your PDA-cam (not available in standard PDA supplied) or another camera, take a picture of what you want to capture.
3. Click the Annotate icon to display the Annotate screen.
4. Move the image or audio file to a location that will make it easier to Transfer it to a PC later, when you download and move the recorded data file to your PC. Place the file into the synchronization folder on your PDA, so that it will be automatically transferred into the sync folder on the PC the next time you dock the PDA.


### **Turn off the Recorder**

The Recorder always has the UPS enabled to allow a 5-minute pass through time on a voltage interruption. When you pack the Recorder for transport, you have the option to shut down the Recorder and disable the UPS before unplugging the power cord.

To turn off the Recorder:

1. Select **Menu>Tools>1750 Shut down...**
2. Confirm the warning message.
3. Wait until the Power LED is solid green.

The power cord can be safely unplugged.

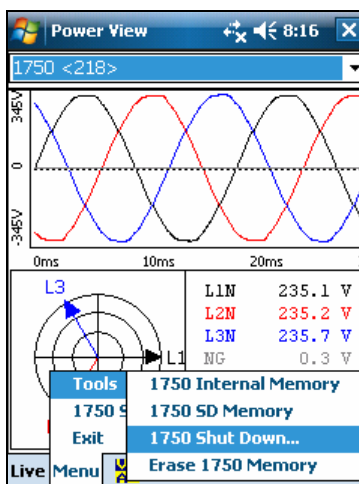

azd143.bmp

## Cleaning and Maintenance

The Recorder contains no user serviceable parts. Contact an Authorized Fluke Service Center for repair. Periodically wipe the case with a damp cloth and mild detergent. Do not use abrasives or solvents.

## Regulatory Information for Wireless Communication

### ⚠ Caution

- Any changes or modifications to the wireless 2.4 GHz radio not expressly approved by Fluke Corporation could void the user's authority to operate the equipment.
- The distance between the Recorder and the human body must be  $\geq 20$  cm (7.9 inches) during wireless communication.
- FCC ID: T68FLK1750 or QQQWT 11 (see rear decal on Fluke 1750 for the appropriate ID).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

**Class A digital device:** A digital device that is marketed for use in a commercial, industrial or business environment, exclusive of a device which is marketed for use by the general public or is intended to be used in the home.

**Class B digital device:** A digital device that is marketed for use in a residential environment notwithstanding use in commercial, business and industrial environments. Examples of such devices include, but are not limited to, personal computers, calculators, and similar electronic devices that are marketed for use by the general public.

The Fluke 1750 Power Recorder (wireless host) has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses,

and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

In addition, the internal limited modular radio has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The term “IC:” before the radio certification number only signifies that Industry of Canada technical specifications were met.

## **Specifications for the System: Recorder and Power Analyze Software**

### **General Specifications**

#### **Power Quality Measurement Standards**

**Conformance** ..... IEC 61000-2-4:2002 Class 1, IEC 61000-4-30, IEEE519, IEEE1159, IEEE1459, IEC 61557-12:2008, and EN50160

**Clock/Calendar** ..... Leap years, 24-hour clock

**Real-time Clock Accuracy** ..... Not more than  $\pm 1$  s/day

**Internal Memory Capacity for Data** ..... At least 2 GB

**Maximum Recording Period** ..... At least 31 days

**Measurement Time Control** ..... Automatic

**Maximum Number of Events** ..... Limited only by the size of the internal memory.

**Power Requirements** ..... 100 to 240 V rms  $\pm 10$  %, 47-63 Hz, 40 W

#### **Operating Time During Interruptions**

(internal UPS operation) ..... 5 minutes per interruption, 60 minutes total operating time without recharging

**Dimensions** ..... 215 x 310 x 35 mm (8.5 x 12.2 x 3.5 inch)

**Mass (Weight)** ..... 6.3 kg (14 lbs)

## Input Specifications

|                         |                                                                                                                                                                                                          |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement Types ..... | One Phase Plus Neutral, One Phase IT No Neutral, One Phase Split Phase, Three Phase Wye, Three Phase Delta, Three Phase IT, Three Phase High Leg, Three Phase Open Leg, 2 Element Delta, 2 ½ Element Wye |
| Input Channels .....    | Voltage: 5 channels, AC/DC Current: 5 channels                                                                                                                                                           |
| Voltage Channels .....  | Input resistance: 2 MΩ<br>Input capacitance: <20 pF                                                                                                                                                      |
| Current Channels .....  | Self-identifying probes<br>Types available: current clamps, Flexi-CTs                                                                                                                                    |
| Measuring Method .....  | Simultaneous digital sampling of voltage and current. Digital PLL synchronized sampling, internal frequency reference used during voltage drops.                                                         |

## Synchronization and Sampling

|                                  |                                                                                                                                                                                           |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PLL-Synchronization Source ..... | The PLL synchronizes to the A-N/L1-N voltage for wye power types, and to the A-B/L1-L2 voltage for delta power types. All listed power types can be characterized as either wye or delta. |
| PLL Lock Range .....             | 42.5 to 69 Hz                                                                                                                                                                             |
| Sampling Frequency .....         | Voltage and current: 256 samples/cycle<br>Inter-harmonics per IEC61000-4-7: 2560 points / 10 cycles (50 Hz), 3072 points/12 cycles (60 Hz)<br>Transient Voltage: 5 MHz                    |
| A/D Resolution .....             | Voltage and current: 24 bits<br>Transient voltage: 14 bits                                                                                                                                |

## Voltage and Current Measurements

|                                     |                                                                                       |
|-------------------------------------|---------------------------------------------------------------------------------------|
| Voltage Measurement Range .....     | AC voltage: 1000 V rms ± 10 % Overrange<br>DC voltage: ± 1000 V + 10 % Overrange      |
| Voltage Crest Factor .....          | 3 or less                                                                             |
| Voltage Input Impedance .....       | 2 MΩ                                                                                  |
| Current Measurement Range .....     | Depends on current probe used                                                         |
| Current Crest Factor .....          | 4 or less                                                                             |
| Current Input Characteristics ..... | 2 V rms = full scale, 1 MΩ Input Impedance for ferro CTs, low impedance for Flexi-CTs |

## Voltage and Current Measurement Accuracy

### RMS Voltage

|                               |                                                                                                                                                                                                                             |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement Type .....        | True rms calculated continuously: every cycle, every 1/2 cycle, and every 10 or 12 cycles at 50 or 60 Hz respectively, as required by IEC 61000-4-30.                                                                       |
| Measurement Uncertainty ..... | AC: ± 0.2 % reading ± 0.1 % full scale above 50 V rms<br>DC: ± 0.5 % reading ± 0.2 % full scale above 50 V dc<br>If the ac component of a dc signal is below 40 V rms, the dc uncertainty specification may have an offset. |

### RMS Current

|                               |                                                                                                                                                                                                                                                                                     |
|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement Type .....        | True rms calculated continuously: every cycle, every 1/2 cycle, and every 10 or 12 cycles at 50 or 60 Hz respectively, as required by standards                                                                                                                                     |
| Measurement Uncertainty ..... | ± (0.1 % full scale + 0.5 % reading + current sensor accuracy, valid for 5 % to 100 % of current sensor range)                                                                                                                                                                      |
| Current Accuracy .....        | Ferromagnetic Clamps<br>± (0.1 % full scale + 0.2 % reading + current sensor accuracy), valid for 5 % to 100 % of current sensor range<br>Flexible Current Probes<br>± (0.1 % full scale + 0.5 % reading + current sensor accuracy), valid for 5 % to 100 % of current sensor range |

### **Transient Voltage (Impulse)**

|                              |                                                                                |
|------------------------------|--------------------------------------------------------------------------------|
| Measurement Type.....        | Waveshape sampling, not peak detect                                            |
| Full Scale.....              | 8000 V pk                                                                      |
| Sample Resolution.....       | 200 nS                                                                         |
| Measurement Uncertainty..... | $\pm 5\%$ reading $\pm 20$ V (test parameters: 1000 V dc, 1000 V rms, 100 kHz) |

### **Dip (Sag) and Swell Measurements**

#### **Voltage Swell (rms swell)**

|                       |                                                                                                                                                                    |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement Type..... | True rms (one cycle calculation by overlapping each half cycle)<br>(voltage between lines is measured for 3P3W lines and phase voltage is measured for 3P4W lines) |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Displayed Data ..... Amplitude and duration of swell

Measurement Accuracy..... Same as rms voltage

#### **Voltage Dip (RMS sag)**

|                       |                                                                                                                                                                    |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement Type..... | True rms (one cycle calculation by overlapping each half cycle)<br>(voltage between lines is measured for 3P3W lines and phase voltage is measured for 3P4W lines) |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Displayed Data ..... Amplitude and duration of dip or interruption

Measurement Accuracy..... Same as rms voltage

#### **Voltage Dropout (Interruption)**

Measurement Type..... Same as Voltage Dip

### **Power and PF Measurement**

Calculated per IEEE1459 for best performance when distortions exist

Measurement Type..... True rms calculated continuously: every cycle, and every 10 or 12 cycles at 50 or 60 Hz respectively, as required by standards

Measurement Accuracy.....  $\pm 0.2\%$  reading  $\pm 0.1\%$  full scale + current sensor accuracy

#### **Frequency**

Measurement Range ..... 42.5 to 69 Hz

Measurement Source ..... Same as PLL synchronization source

Measurement Accuracy.....  $\pm 10$  mHz (10 to 110 % of range, with sine wave)

#### **Reactive Power**

Accuracy .....  $\pm 0.2\%$  reading  $\pm 0.1\%$  full scale + current sensor accuracy

#### **Power Factor**

Measurement Range ..... -1.000 (leading) to 0.000 to +1.000 (lagging)

Measurement Accuracy.....  $\pm 1$  digit from the calculation of each measured value ( $\pm 3$  digits for total)

#### **Displacement Power Factor**

Measurement Method..... Calculated from the phase difference between voltage fundamental and current fundamental

Measurement Range ..... -1.000 (leading) to 0.000 to + 1.000 (lagging)

Measurement Accuracy.....  $\pm 0.5\%$  reading  $\pm 2\%$  full scale  $\pm 1$  digit

#### **Voltage Unbalance and Phase Sequence**

Measurement Method..... Positive sequence voltage divided by negative sequence voltage, per IEC 61000-4-30

#### **Harmonic Voltage and Current**

Analysis Window..... rectangular

Analysis Order ..... 1st to 50th order

Measurement Accuracy ..... Voltage / Current: 1st to 20th orders:  $\pm 0.5\%$  reading  $\pm 0.2\%$  full scale  
 21st to 50th orders:  $\pm 1\%$  reading  $\pm 0.3\%$  full scale (current sensor accuracy must be included for current and power)

Measurement Method..... IEC 61000-4-7:2002

#### **Inter-harmonic Voltage and Current (Intermediate Harmonics)**

Analysis Window..... rectangular

Analysis Orders ..... 0.5 to 49.5th order

Measurement Method..... IEC 61000-4-7:2002

**Voltage flicker**

Measurement Method ..... as per IEC 61000-4-15:2003: 10 min (Pst), 2 h (Plt)

**External Interface Specifications**

**LAN Interface**

Connector ..... RJ-45  
Speed and Type ..... 10/100 Base-T, auto MDIX  
Communications Protocol ..... TCP/IP over Ethernet

**Wireless Controller Interface**

Connection ..... wireless (2.4 GHz radio)  
Speed ..... up to 700 kbit/second  
Communications Protocol ..... Bluetooth SPP

**Environmental and Safety Specifications**

Operating Environment ..... indoors or in covered area outdoors, up to 2000 m altitude  
Storage Temperature and Humidity ..... -20 °C to 50 °C, 80 % rh max, non-condensing  
Operating Temperature and Humidity ..... 0 °C to 40 °C, 80 % rh max, non-condensing  
Altitude ..... 2000 m (6562 feet)

**Maximum Rated Working Voltage**

Voltage Terminals ..... 1100 V rms  
Voltage Durability ..... 5550 V rms ac for 1 minute, between voltage input terminals, voltage input terminals and current probes, and voltage input terminals and case (50/60 Hz, 1 mA sense current)  
Enclosure Protection ..... IP30 (per EN 60529)

**Standards Conformance**

EMC ..... IEC 61326-1:2006 Class A  
..... IEC 61000-3-2:2005, 3<sup>rd</sup> Edition  
..... IEC 61000-3-3:2005, 1.2 Edition  
..... AS/NZS 4268:2008 (BT module only)  
..... ETSI EN300328 (V1.7.1:2006)  
Safety ..... IEC 61010-1:2001  
..... Overvoltage Category 1000 V CAT III, 600 V CAT IV  
..... EN/IEC 61010-032:2002  
..... Pollution Degree 2