

# **56x**

Infrared Thermometers

## Users Manual

August 2010

©2010 Fluke Corporation, All rights reserved. Specifications are subject to change without notice.  
All product names are trademarks of their respective companies.

# Table of Contents

| Title                                 | Page |
|---------------------------------------|------|
| Introduction.....                     | 1    |
| Contacting Fluke.....                 | 1    |
| Safety Information .....              | 2    |
| Features.....                         | 5    |
| 561 Display .....                     | 6    |
| 566/568 Display .....                 | 7    |
| 566/568 Menu Overview.....            | 7    |
| Save .....                            | 8    |
| Light .....                           | 8    |
| Memory .....                          | 9    |
| Emissivity Menu.....                  | 9    |
| °C and °F .....                       | 11   |
| Min, Max, Avg, Differential.....      | 11   |
| Alarm.....                            | 12   |
| Trigger Lock.....                     | 12   |
| Laser .....                           | 12   |
| Setup.....                            | 13   |
| Backlight .....                       | 13   |
| Time/Date.....                        | 13   |
| Language.....                         | 14   |
| Deleting Data.....                    | 14   |
| Deleting All Data .....               | 14   |
| Deleting Individual Data Records..... | 15   |
| Buttons and Connector.....            | 15   |
| How the Thermometers Work .....       | 16   |
| Operating the Thermometer.....        | 16   |
| Temperature Measurement .....         | 16   |
| Locating a Hot or Cold Spot.....      | 17   |
| Distance and Spot Size .....          | 18   |
| Field of View .....                   | 19   |
| Emissivity .....                      | 19   |
| HOLD .....                            | 19   |
| Storing Data.....                     | 20   |
| Downloading Data.....                 | 20   |
| External Contact Probe .....          | 21   |
| Troubleshooting.....                  | 21   |

Maintenance..... 22

    Battery Charge..... 22

    Changing the Batteries ..... 22

    Cleaning the Lens..... 23

    Cleaning the Housing ..... 23

User Replaceable Parts and Accessories..... 23

    User Replaceable Parts ..... 23

    Accessories..... 24

    Recommended Temperature Probes..... 24

Specifications..... 25

    561 Accessory ..... 26

    566/568 Accessory ..... 26

## ***List of Tables***

| <b>Table</b> | <b>Title</b>                              | <b>Page</b> |
|--------------|-------------------------------------------|-------------|
| 1.           | Symbols.....                              | 3           |
| 2.           | Top-Level Menu Description.....           | 8           |
| 3.           | Surface Emissivity (561).....             | 10          |
| 4.           | Nominal Surface Emissivity (566/568)..... | 11          |
| 5.           | Buttons and Connector .....               | 15          |
| 6.           | Troubleshooting .....                     | 21          |
| 7.           | Replaceable Parts .....                   | 23          |
| 8.           | Recommended Temperature Probes.....       | 24          |

## ***List of Figures***

| <b>Figure</b> | <b>Title</b>                           | <b>Page</b> |
|---------------|----------------------------------------|-------------|
| 1.            | 561 Laser Safety Markings .....        | 4           |
| 2.            | 566/568 Laser Safety Markings .....    | 4           |
| 3.            | Thermometer Display.....               | 6           |
| 4.            | Menu Navigation.....                   | 7           |
| 5.            | How the Thermometer Works.....         | 16          |
| 6.            | Locating a Hot or Cold Spot .....      | 17          |
| 7.            | Distance and Spot Size.....            | 18          |
| 8.            | Field of View.....                     | 19          |
| 9.            | Thermocouple and USB Connections ..... | 20          |
| 10.           | 566/568 Battery Replacement .....      | 23          |

## Safety Information

A **Warning** identifies conditions and actions that pose hazard(s) to the user; A **Caution** identifies conditions and procedures that could cause Product damage, equipment under test damage, or permanent loss of data.

Symbols used on the Product and in this manual are explained in Table 1 and Figures 1 and 2.

### Warning

To prevent eye damage and personal injury:

- Read all safety Information before you use the Product.
- Do not look directly into the laser with optical tools (for example, binoculars, telescopes, microscopes). Optical tools can focus the laser and be dangerous to the eye.
- Do not look into the laser. Do not point laser directly at persons or animals or indirectly off reflective surfaces.
- Do not use laser viewing glasses as laser protection glasses. Laser viewing glasses are used only for better visibility of the laser in bright light.
- Do not open the Product. The laser beam is dangerous to eyes. Have the Product repaired only through an approved technical site.
- Replace the batteries when the low battery indicator shows to prevent incorrect measurements.
- The battery door must be closed and locked before you operate the Product.
- Do not use the Product if it operates incorrectly.
- Do not use the Product around explosive gas, vapor, or in damp or wet environments.
- Do not connect the optional external probe to live electrical circuits.
- See emissivity information for actual temperatures. Reflective objects result in lower than actual temperature measurements. These objects pose a burn hazard.
- Do not leave the thermometer on or near objects of high temperature.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser radiation exposure.
- Use the Product only as specified, or the protection supplied by the Product can be compromised.


**⚠ Caution**

To avoid damaging the thermometer or the equipment under test, protect them from the following:

- **EMF (electro-magnetic fields) from arc welders, induction heaters, etc.**
- **Static electricity**
- **Thermal shock (caused by large or abrupt ambient temperature changes- for highest accuracy, allow 30 minutes for thermometer to stabilize before use).**


**Table 1. Symbols**

| Symbol                                                                                             | Explanation                                                                                                       |
|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|                   | Hazardous voltage. Risk of electrical shock.                                                                      |
|                   | Risk of danger. Important information.                                                                            |
|                   | Warning. Laser.                                                                                                   |
|                   | Conforms to requirements of European Union and European Free Trade Association (EFTA)                             |
|                   | Celsius                                                                                                           |
|                 | Fahrenheit                                                                                                        |
|                 | Battery                                                                                                           |
|                 | Do not dispose of this product as unsorted municipal waste. Go to Fluke's web site for recycling information.     |
|                 | Battery                                                                                                           |
| <br>沪制01120009号 | China metrology certification mark for measuring instruments manufactured in the Peoples Republic of China (PRC). |

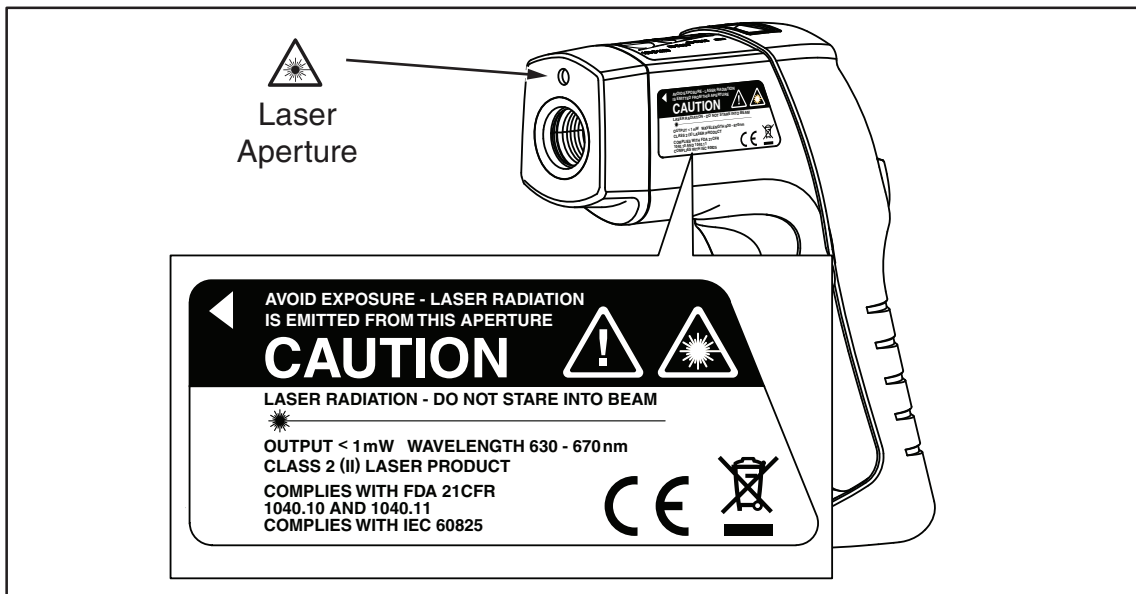

eff010f.eps

Figure 1. 561 Laser Safety Markings

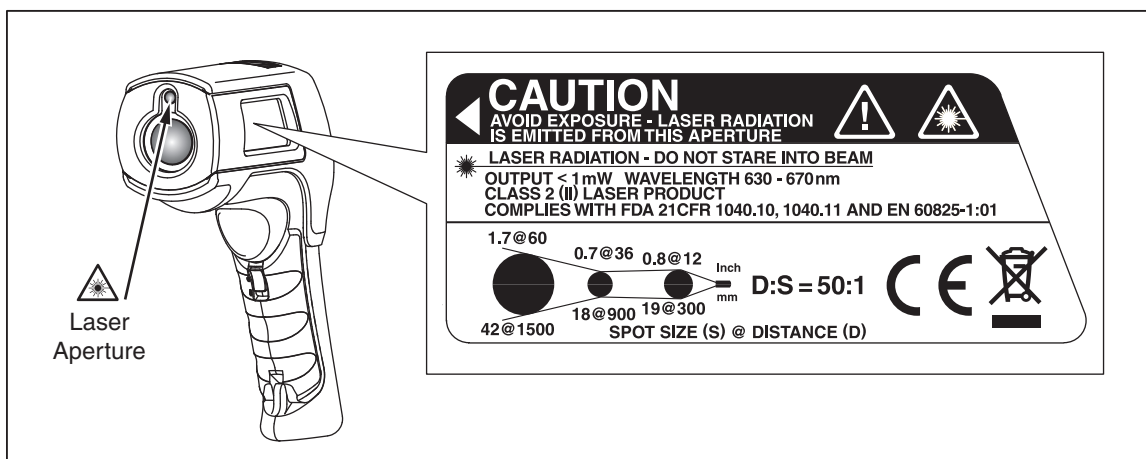

eyl08b.eps

Figure 2. 566/568 Laser Safety Markings



## **Features**

### **561:**

- Single-spot laser sighting
- Backlit display
- Current Temperature plus MAX, MIN, DIF, AVG temperature displays
- Two AA batteries
- Hard case
- 80PK-1 and 80PK-11 K-type thermocouple probe
- Adjustable emissivity and predefined emissivity table
- Infrared and thermocouple temperature display
- Celsius or Fahrenheit temperature display
- Tripod mount
- Auto off
- Standard miniature K-type thermocouple connector input
- Printed *56x Getting Started Guide*
- *56x Manuals CD*

### **566 and 568 include items listed above plus:**

- 12 or 24 hour clock
- Last reading Hold (20 seconds)
- Multi-language interface
- High and low alarm
- Data storage and review
- Trigger lock
- USB 2.0 computer interface cable (568)
- FlukeView Forms Documenting Software (568)

561 Display

The primary temperature display reports the current or last IR temperature read until the 7-second hold time elapses.

The secondary temperature display reports current thermocouple temperature when a type-K thermocouple is attached. When a thermocouple is not connected, the small temperature display reports a choice of maximum, minimum, or difference between maximum and minimum temperature.

You can toggle through the minimum, maximum, and difference IR temperatures anytime the display is on. The MIN, MAX, and DIF temperatures are constantly calculated and updated when the trigger is pressed. After the trigger is released, the MIN, MAX, DIF temperatures are held for 7 seconds.

Note

When the battery is low,  appears on the display.

The last selection (MIN/MAX/DIF) is maintained on the secondary display even after the Thermometer has been turned off, providing the batteries have not failed. See Figure 3.

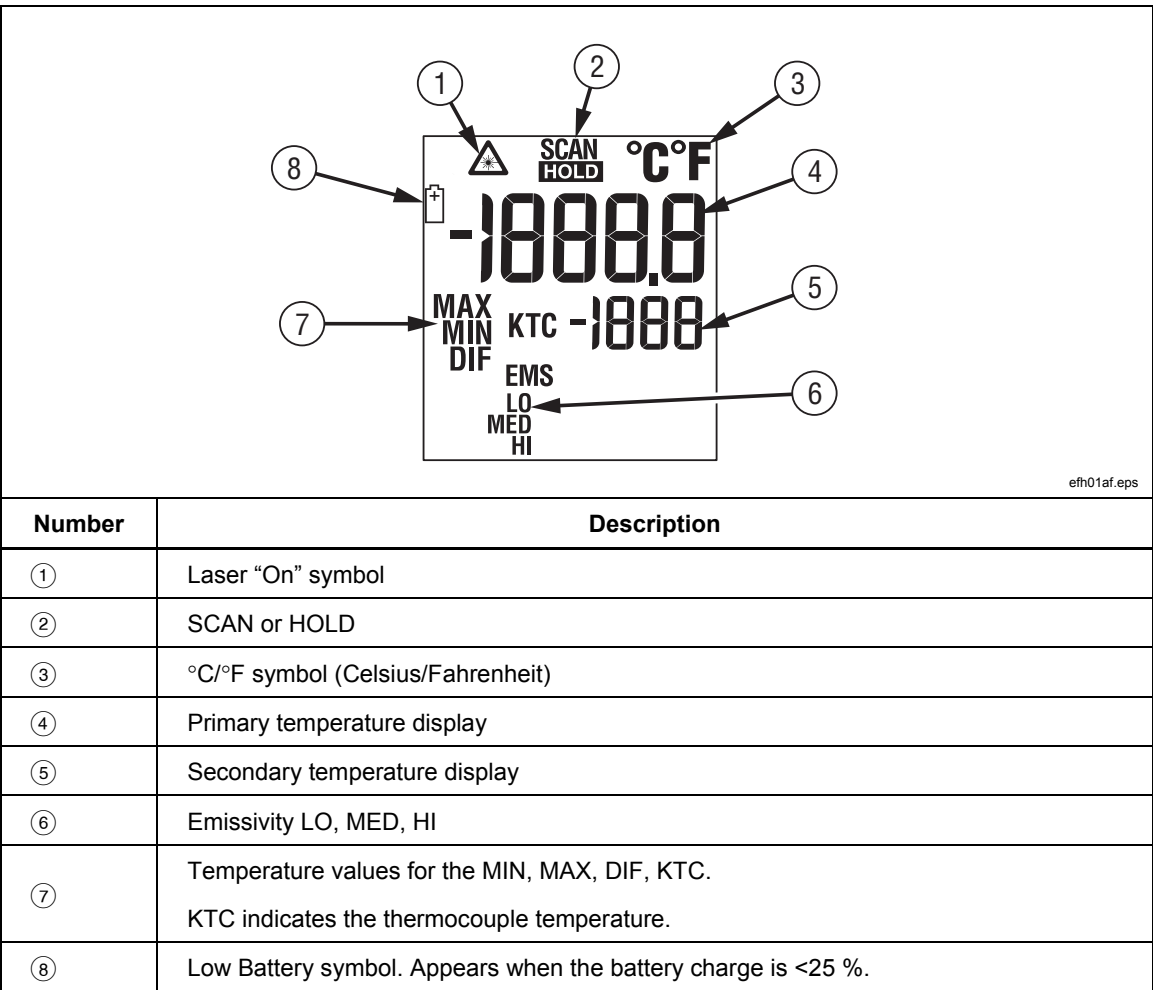


Figure 3. 561 Thermometer Display

## 566/568 Display

The 566/568 thermometers display can show data in the following languages:

- English
- Spanish
- French
- German
- Portuguese
- Japanese
- Simplified Chinese

To change the displayed language, refer to “Setup”.

## 566/568 Menu Overview

There are many settings that can be easily changed by using the menu. Figure 4 shows the LCD and menu interface. Selecting the **Menu** softkey advances the menu to the next level. Table 2 is a top-level description of the menu.

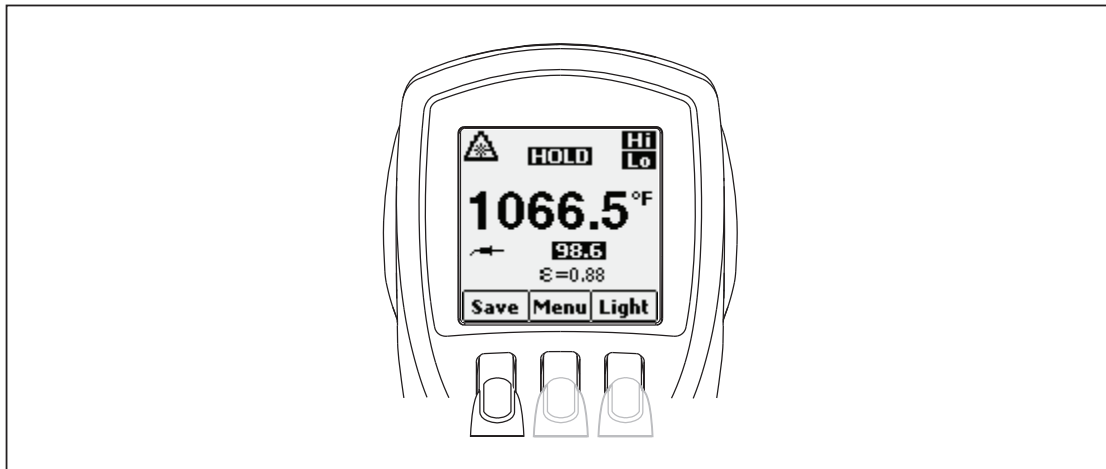


Figure 4. Menu Navigation

eyl01a.eps

Table 2. Top-Level Menu Description

| Level | Left Softkey        | Description                                                                                                                      | Center Softkey | Right Softkey | Description                 |
|-------|---------------------|----------------------------------------------------------------------------------------------------------------------------------|----------------|---------------|-----------------------------|
| 1     | <b>Save</b>         | Save reading to memory                                                                                                           | <b>Menu</b>    | <b>Light</b>  | Adjust backlight brightness |
| 2     | <b>Mem</b>          | Review/delete memories                                                                                                           | <b>Menu</b>    | <b>E</b>      | Set emissivity              |
| 3     | <b>MnMx</b>         | Enables Min/Max                                                                                                                  | <b>Menu</b>    | <b>Avg</b>    | Enable Avg/Diff             |
| 4     | <b>°C/°F</b>        | Toggle between C and F                                                                                                           | <b>Menu</b>    | <b>Alarm</b>  | Set and enable alarms       |
| 5     | <b>🔒<br/>(Lock)</b> | Lock the thermometer on                                                                                                          | <b>Menu</b>    | <b>Laser</b>  | Toggle the laser on/off     |
| 6     | <b>Setup</b>        | <ul style="list-style-type: none"> <li>- Turn off/on backlight</li> <li>- Change Time/Date</li> <li>- Change Language</li> </ul> | <b>Menu</b>    | -             | -                           |

Each menu item and function is explained in greater detail in the following sections.

### Save

To save readings:

1. Pull the trigger to take a measurement.
2. Release the trigger to stop taking the measurement.
3. Press the **Save** softkey to enter the Save menu.
4. Press the **Yes** softkey to save the reading.

The reading is assigned a memory location and a time and date stamp.

The reading includes:

- IR temperature
- Thermocouple temperature (if connected)
- Emissivity
- Min/Max/Avg/Dif (if either Min/Max or Avg/Dif is enabled)
- Date/Time

You may also press the **Cancel** softkey to abort saving the reading.

### Light

The thermometers are equipped with a backlit display with two brightness levels. The **Light** softkey is used to adjust the backlight brightness. The backlight is on each time the trigger is pulled.

To toggle the backlight brightness, press the **Light** softkey.

The backlight can be disabled using the Setup menu. See “Setup” for more information.

## **Memory**

The thermometers can store measurement records including time, date, emissivity, and measurement record numbers (see “Save” for more information). The 566 can store 20 records and the 568 can store 99.

To access records stored in memory:

1. Press the **Menu** softkey until **Mem** appears as the left softkey function.
2. Press the **Mem** softkey to access the Memory menu. Saved readings can be read.

## **Emissivity Menu**

The Emissivity menu includes a list of pre-defined materials and lists their typical emissivity values, see Tables 3 and 4. For further information, see “Emissivity”.

### *Note*

*Default emissivity is 0.95.*

To access the Emissivity menu:

1. Press the **Menu** softkey until **Ɛ** (emissivity) appears as the right softkey function.
2. Press the **Ɛ** softkey.

The Emissivity list may be accessed by pressing the **Table** softkey or a material's typical emissivity may be entered manually by pressing the **No.** softkey.

- If the Emissivity table is accessed, a listing of materials and their suggested emissivity is shown.
  1. Use the down arrow to navigate through the list.
  2. Press the **Enter** softkey to choose the desired material.
- To enter an emissivity value manually:
  1. Press the **No.** softkey.
  2. Use the down or up arrow softkey to change the entry. Hold down the up or down arrow softkey to increase the rate of change.
  3. Press the **Done** softkey when finished to return to the main menu.

Table 3. Surface Emissivity (561)

| Materials                  | Switch Setting | Materials            | Switch Setting |
|----------------------------|----------------|----------------------|----------------|
| <b>Aluminum</b>            |                | <b>Iron, Cast</b>    |                |
| Oxidized                   | Low            | Oxidized             | High, Medium   |
| Alloy A3003                |                | Unoxidized           | Low            |
| Oxidized                   | Low            | Molten               | Low            |
| Roughened                  | Low            | <b>Iron, Wrought</b> |                |
| <b>Brass</b>               |                | Dull                 | High           |
| Burnished                  | Low            | <b>Lead</b>          |                |
| Oxidized                   | Low            | Rough                | Low            |
| Copper                     |                | Oxidized             | Low, Medium    |
| Oxidized                   | Medium         | <b>Molybdenum</b>    |                |
| Electrical Terminal Blocks | Medium         | Oxidized             | Low, Medium    |
| <b>Haynes</b>              |                | <b>Nickel</b>        |                |
| Alloy                      | Medium         | Oxidized             | Low            |
| <b>Inconel</b>             |                | <b>Platinum</b>      |                |
| Oxidized                   | High, Medium   | Black                | High           |
| Sandblasted                | Medium         | <b>Steel</b>         |                |
| Electropolished            | Low            | Cold-Rolled          | High           |
| <b>Iron</b>                |                | Ground Sheet         | Medium         |
| Oxidized                   | High, Medium   | Polished Sheet       | Low            |
| Rusted                     | Medium         | <b>Zinc</b>          |                |
|                            |                | Oxidized             | Low            |

**Table 4. Nominal Surface Emissivity (566/568)**

| Material                                                                                                                                                                | Value | Material      | Value |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|---------------|-------|
| Default****                                                                                                                                                             | 0.95  | Glass (plate) | 0.85  |
| Aluminum*                                                                                                                                                               | 0.30  | Iron*         | 0.70  |
| Asbestos                                                                                                                                                                | 0.95  | Lead*         | 0.50  |
| Asphalt                                                                                                                                                                 | 0.95  | Oil           | 0.94  |
| Brass*                                                                                                                                                                  | 0.50  | Paint         | 0.93  |
| Ceramic                                                                                                                                                                 | 0.95  | Plastic**     | 0.95  |
| Concrete                                                                                                                                                                | 0.95  | Rubber        | 0.95  |
| Copper*                                                                                                                                                                 | 0.60  | Sand          | 0.90  |
| Food - Frozen                                                                                                                                                           | 0.90  | Steel*        | 0.80  |
| Food - Hot                                                                                                                                                              | 0.93  | Water         | 0.93  |
|                                                                                                                                                                         |       | Wood ***      | 0.94  |
| * Oxidized<br>** Opaque, over 20 mils<br>*** Natural<br>**** Factory Setting<br>Highlighted items may also be found in the emissivity table built into the thermometer. |       |               |       |

### °C and °F

To toggle between °C (Celsius) and °F (Fahrenheit) measurements, press the **Menu** softkey until °C or °F appears as the left softkey function. Press the corresponding softkey to change between the measurements.

### Min, Max, Avg, Differential

The thermometers can measure minimum (MIN), maximum (MAX), average (AVG), or differential (Δ) temperatures each time a reading is taken. These values are not shown if a thermocouple is plugged into the thermometer.

To turn on the Min Max mode:

1. Press the **Menu** softkey until **MnMx** (Min Max) appears as the left softkey function.
2. Press the **MnMx** softkey.

The display shows the present reading, maximum and minimum readings, and the emissivity setting.

To turn on the Avg/Dif mode:

1. Press the **Menu** softkey until **Avg** appears as the right softkey function.
2. Press the **Avg** softkey.

The display shows the present reading, average reading, the differential reading between max and min (designated by Δ), and the emissivity setting.

*Note*

*Min, Max, Avg, and Differential readings are saved as part of the saved data when either Min/Max or Avg/Dif mode is enabled.*

### **Alarm**

The thermometers have a programmable high and low alarm to designate high or low readings depending on the thresholds entered. When the alarm level is reached, an alarm will sound and the display will flash orange and white. To set either the high or low alarm:

1. Press the **Menu** softkey until **Alarm** appears as the right softkey function.
2. Press the **Alarm** softkey to access the Alarm menu.
3. Press either the **Hi** or **Lo** softkey, depending on which alarm will be set.
4. Press the **ON** softkey to turn the alarm on.
5. Press the **OFF** softkey to turn the alarm off.
6. Use the **Set** softkey to access the Hi or Lo Alarm Set menu.
7. Use the down or up softkeys to change the alarm setting.
8. Once the desired settings have been entered, press the **Done** softkey.

### **Trigger Lock**

The thermometer trigger can be locked on for continuous measurement. To lock the trigger:

1. Press the **Menu** softkey until the lock symbol (🔒) appears as the left softkey function.
2. Press the 🔒 softkey to lock the trigger. The lock symbol appears on the display to designate a locked trigger. When the trigger is locked, the 🔒 softkey changes to 🔓. Press this softkey to unlock the trigger.

### **Laser**



#### **Warning**

**To prevent eye damage and personal injury:**

- **Do not look into the laser. Do not point laser directly at persons or animals or indirectly off reflective surfaces.**

The thermometer is equipped with a laser used for aiming purposes only. The laser turns off when the trigger is released.

To enable or disable the laser:

1. Press the **Menu** softkey until **Laser** appears as the right softkey function.
2. Press the **Laser** softkey to enable or disable the laser. ⚠ appears on the display when the laser is enabled.



## **Setup**

From the Setup menu, the backlight, time and date, and display language can be changed.

## **Backlight**

In normal use, the backlight is always on. Use this menu to change the backlight setting from on to off. Turning the backlight off conserves battery power.

1. Press the **Menu** softkey until **Setup** appears as the left softkey function.
2. Press the **Setup** softkey.
3. **Backlight** has an indicator next to it. To enter the backlight menu, press the **Enter** softkey.
4. Press the **OFF** softkey to turn the backlight off, press the **ON** softkey to turn it on.
5. Press the **Back** softkey to return to the Setup Menu.

## **Time/Date**

To change the time on the thermometer:

1. Press the **Menu** softkey until **Setup** appears as the left softkey function.
2. Press the **Setup** softkey to enter the Setup menu.
3. Press the down arrow softkey to select **Time/Date**.
4. Press the **Enter** softkey.
5. Select the **Time** softkey.
6. Select the desired time format softkey (**24hr** or **12hr**).
7. Use the up and down softkeys to change the selected hour to the desired hour.
8. Press the **Next** softkey to select the minutes.
9. Use the up and down softkeys to change the selection to the desired minute.
10. When in 12 hour mode, press the **Next** softkey to highlight the **am/pm** parameter.
11. Use the up and down softkey to change to **am** or **pm**.
12. Press the **Done** softkey when finished. The display reverts to the first page of the Time/Date menu.

To change the date on the thermometer:

1. From the main menu, press the **Menu** softkey until **Setup** appears as the left softkey function.
2. Press the **Setup** softkey.
3. Press the down arrow softkey to select **Time/Date**.
4. Press the **Enter** softkey.
5. Press the **Date** softkey.
6. Select the date format: Day/Month/Year (**dmy**) or Month/Day/Year (**mdy**).
7. Use the up and down softkeys to change the selected parameter.
8. Press the **Next** softkey and the arrow softkeys to select the month, date, or year parameters.
9. Use the up and down softkeys to change the selected parameter.
10. Press the **Next** softkey to move through each parameter.
11. Press the **Done** softkey when finished. The display reverts to the beginning of the Time/Date menu.

### Language

To change the displayed language:

1. From the main menu, press the **Menu** softkey until **Setup** appears as the left softkey function.
2. Press the **Setup** softkey.
3. Use the down arrow softkey to move the indicator to **Language**.
4. Press the **Enter** softkey.
5. Use the down arrow to move the indicator to the desired language.
6. Press the **Enter** softkey to complete the language selection or press the **Back** softkey to return to the **Setup** menu.

### Deleting Data

To delete stored data from the thermometer, from the main menu, press the **menu** softkey until **Mem** shows as the left softkey function. The last memory location appears on the display. To access the Delete menu, press the **Delete** softkey. From here, either all of the thermometer memory can be deleted or individual records.

### Deleting All Data

To delete all of the records, press the **All** softkey. At the confirmation screen, press the **Yes** softkey.


### Deleting Individual Data Records

To delete individual records, press the **View** softkey and then use the down and up arrow softkeys to access the desired record. Once the desired record is shown, press the **Yes** softkey to delete the record. To cancel data deletion, pull the trigger.

### Buttons and Connector

Table 5 shows the buttons and connector used for the thermometers.

**Table 5. Buttons and Connector**

| Button/<br>Connector                                                                       | Description                                                                                                                                                                                                                               |
|--------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>(561) | Press  and then press  to toggle between the MIN, MAX, and DIF options. |
| <br>(561) | Selects the emissivity setting. You can toggle between LO (0.3), MED (0.7), or HI (0.95) using  .                                                        |
|           | The  button is used to show the MIN, MAX, and DIF functions in the secondary display, whichever was pressed most recently.                               |
|          | K-type thermocouple probe used to make contact temperature measurement.                                                                                                                                                                   |

## How the Thermometers Work

Infrared thermometers measure the surface temperature of an object. The thermometer's optics sense emitted, reflected, and transmitted energy, which is collected and focused onto a detector. The unit's electronics translate the signal into a temperature reading which the unit displays (see Figure 5).

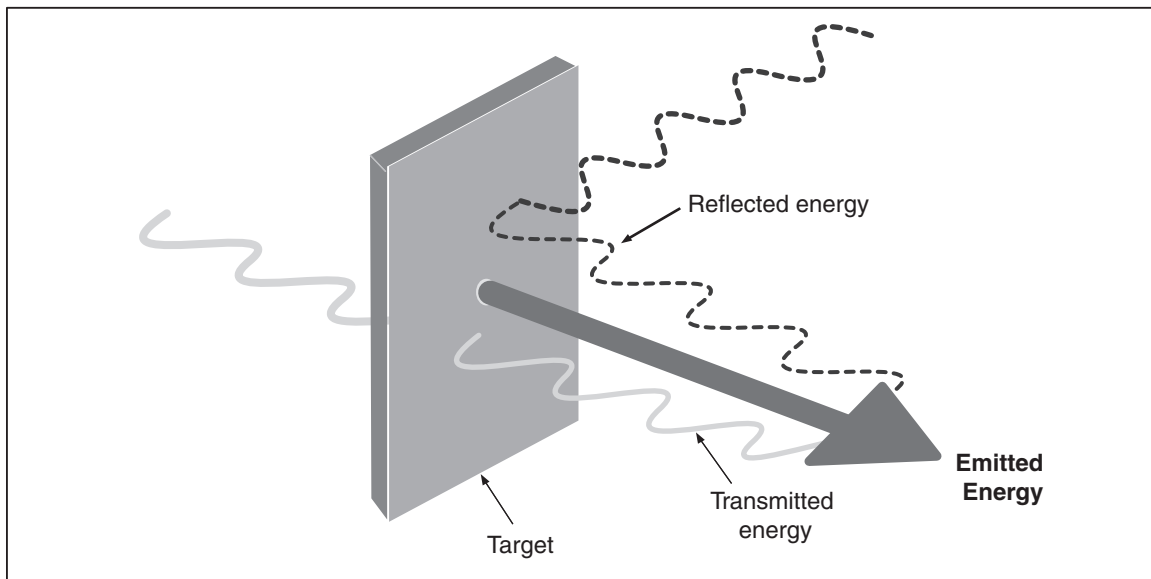


Figure 5. How the Thermometer Works

eyl002f.eps

## Operating the Thermometer

### Temperature Measurement

To measure temperature, point the thermometer at an object and pull the trigger. You can use the laser pointer to help aim the thermometer. You may also insert the K-type thermocouple probe for contact measurement. Be sure to consider distance-to-spot size ratio and field of view (see "Distance and Spot Size" and "Field of View"). The temperature appears on the display.


#### Note

*The laser is used for aiming purposes only and is not related to temperature measurement.*

The thermometer features an auto off function that automatically powers down the thermometer after 20 seconds of inactivity. To turn the thermometer on, pull the trigger.

**Locating a Hot or Cold Spot**

To find a hot or cold spot, aim the thermometer outside the desired area. Then, slowly scan across the area with an up and down motion until you locate the hot or cold spot (see Figure 6).

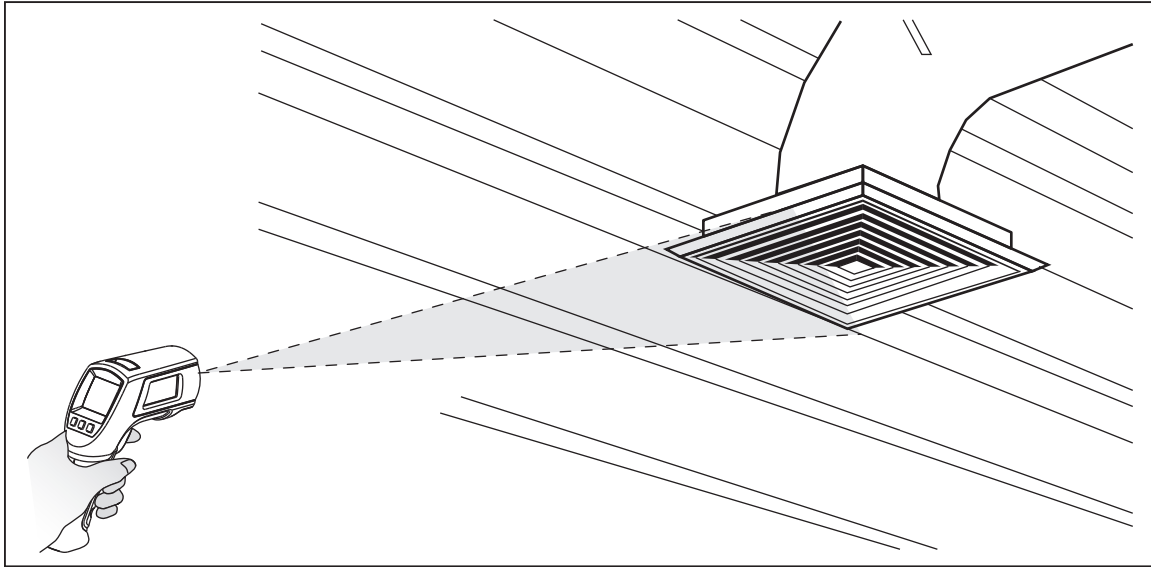


eyl07.eps

**Figure 6. Locating a Hot or Cold Spot**

### Distance and Spot Size

As the distance (D) from the object being measured increases, the spot size (S) of the area measured by the unit becomes larger. The relationship between distance and spot size (D:S) for each unit is shown in Figure 7. The spot sizes indicate 90 % encircled energy.

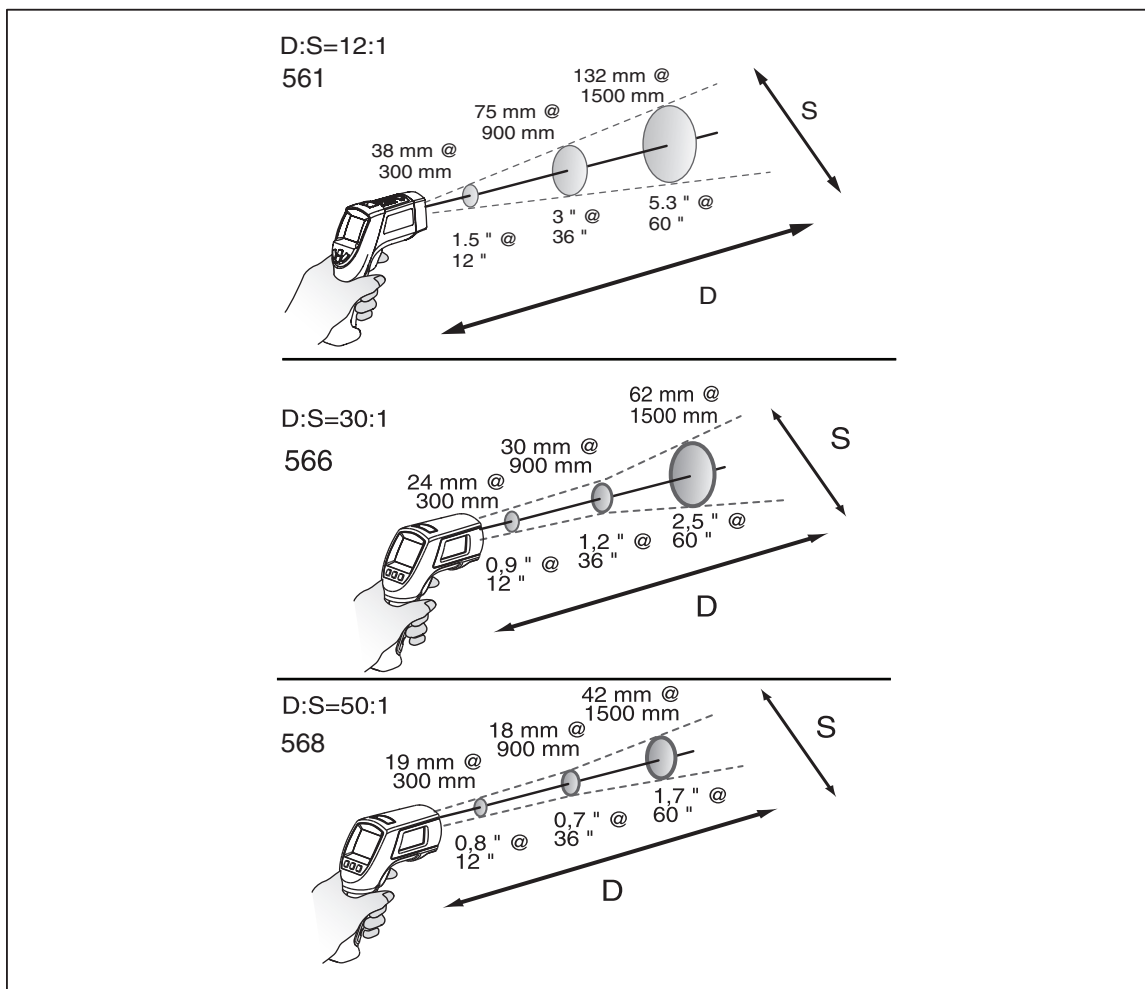


eyl06a.eps

Figure 7. Distance and Spot Size

### **Field of View**

For accurate measurements, make sure that the target is larger than the unit's spot size. The smaller the target, the closer you should be to it (see Figure 8).

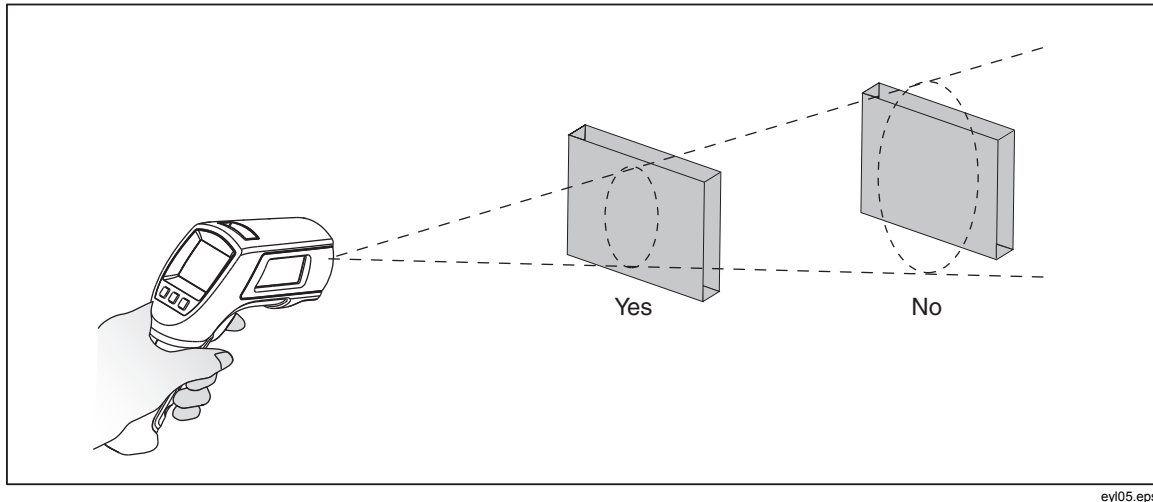

**Figure 8. Field of View**

eyl05.eps

### **Emissivity**

Emissivity describes the energy-emitting characteristics of materials. Most organic materials and painted or oxidized surfaces have an emissivity of approximately 0.95, the default setting for the thermometer.

To compensate for inaccurate readings that may result from measuring shiny metal surfaces, you can cover the surface to be measured with electrical tape or flat black paint (<148 °C/300 °F) with emissivity set to 0.95. Allow time for the tape or paint to reach the same temperature as the surface beneath it. Measure the temperature of the tape or painted surface.

If you cannot paint or use tape, then you can improve the accuracy of your measurements by either numerically adjusting emissivity or by using the Emissivity Menu to access a table of some common materials. The thermometers have numerically adjustable emissivity from 0.10 to 1.00 that can be used in conjunction with the emissivities in Tables 3 and 4. Also, the thermometers have a built-in table of the most common materials that can be set from the Emissivity Menu. The built-in values are indicated in Tables 3 and 4.

### **HOLD**

The display retains its last infrared measurement for twenty seconds when the trigger is released, with **HOLD** appearing on the display. With the probe inserted, the contact thermometer remains on. To freeze the infrared temperature when a probe is not inserted, release the trigger until **HOLD** appears on the display.

### Storing Data

The 566 thermometer can store up to 20 data records. The 568 thermometer can store up to 99 data records. The following information is stored in each record:

- Record number
- IR and probe temperature in °F or °C
- Date/Time
- Emissivity
- Max/Min/Avg/Dif Temperature (if enabled)

For more information, see “Save”.

### Downloading Data

The stored data of the 568 can be downloaded to a personal computer (PC) via the included USB cable and the included FlukeView® Forms Documenting Software. See the FlukeView® Forms documentation for details. The USB input ② is located on the top of the thermometer next to the external probe input ① (see Figure 9).

#### Note

*To prevent incorrect readings, do not perform a temperature measurement of an earthed conductor while the 568 is connected to a PC that is earthed by a three-phase grounding plug.*

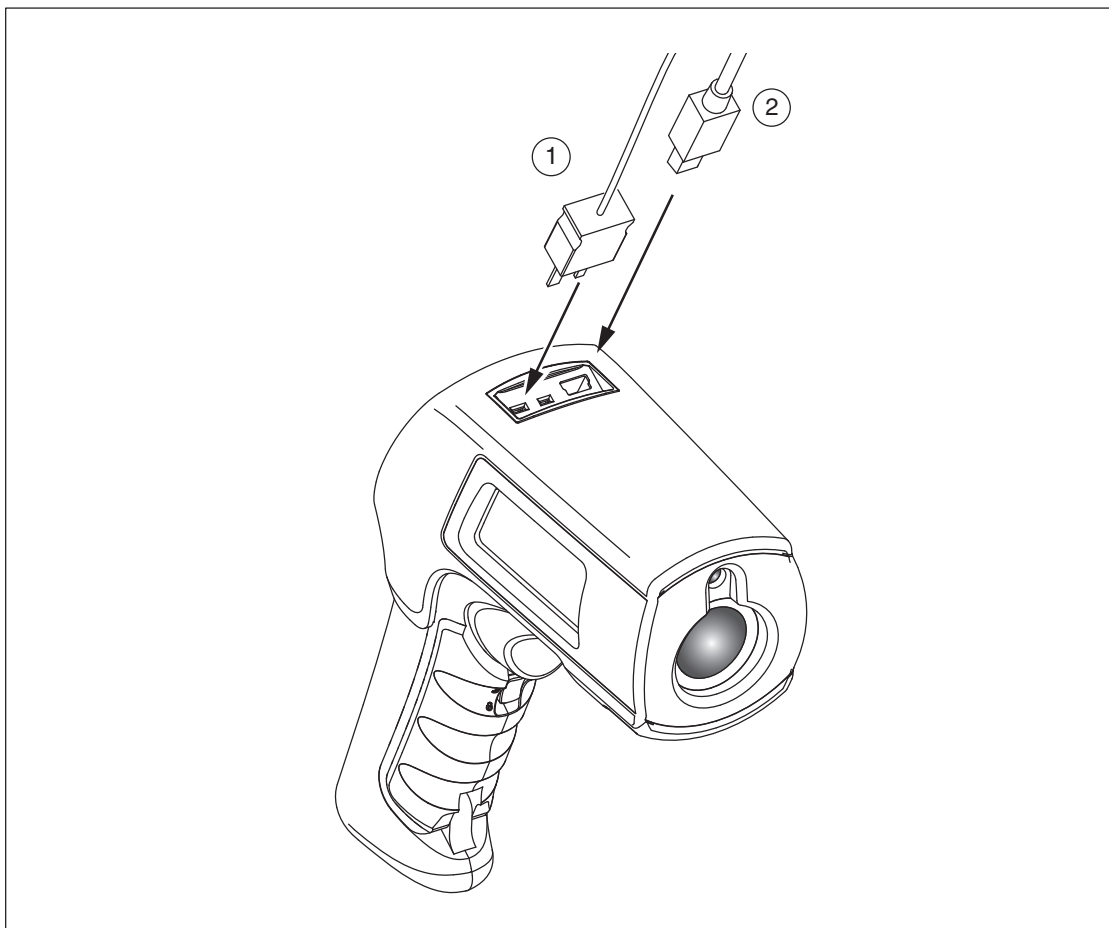


Figure 9. Thermocouple and USB Connections

eyl03.eps



## External Contact Probe

### Warning

**To avoid electrical shock or personal injury, do not connect the external contact probe to live electrical circuits.**

The thermometers come with a bead K-type thermocouple probe. The probes attach to the thermometers via the probe input located on the top of the thermometer (see Figure 9).

With the probe installed, the probe symbol () appears on the display. The probe can be used simultaneously while the thermometer is taking non-contact measurements. The probe readings are shown below the non-contact measurements. The thermometer will stay on when there is a probe inserted. When used with a personal computer and FlukeView Forms (568 only), the auto off feature is disabled.

## Troubleshooting

See Table 6 for remedies to possible problems when using the thermometer.

**Table 6. Troubleshooting**

| Symptom                                                                             | Cause                                                                | Action                                                                                                                                                      |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| --- (on display)                                                                    | Target temperature is over or under range.                           | Select target within specifications                                                                                                                         |
|  | Low batteries                                                        | Replace Batteries                                                                                                                                           |
| Blank display                                                                       | Thermometer is asleep<br>Possible dead batteries                     | Pull trigger<br>Replace batteries                                                                                                                           |
| Laser does not work                                                                 | Low or dead batteries<br>Ambient temperature is above 40 °C (104 °F) | Replace batteries<br>Use in area with lower ambient temperature                                                                                             |
| Failed communication via USB                                                        | Unit is off<br>FlukeView Forms is not running                        | Pull the trigger<br>Start FlukeView Forms                                                                                                                   |
| Inaccuracy                                                                          | Possible incorrect emissivity setting, field of view, or spot size   | See “Emissivity”, “Field of View” and “Distance and Spot Size” sections.                                                                                    |
| Settings such as emissivity, date/time, F/C, and saved data lost                    | Battery dead or not replaced in <1 minute of removal                 | Reset settings. Replace batteries as soon as low battery indicated; Exchange the batteries within one minute of removal. Refer to “Changing the Batteries”. |

## Maintenance

### Battery Charge

Use the battery charge symbols to gauge the approximate level of charge left on the batteries.

#### Notes

*When in low battery mode, the thermometer does not store values. "Err" appears on the display if attempted.*



Batteries are at 5 %. Before taking further readings, the batteries must be changed.

### Changing the Batteries

#### ⚠ Warning

**Batteries contain hazardous chemicals that can cause burns or explode. If exposure to chemicals occurs, clean with water and get medical aid. To prevent injury and for safe operation and maintenance:**


- **Remove all probes, test leads, and accessories before the battery door is opened.**
- **Do not disassemble the battery.**
- **Repair the Product before use if the battery leaks.**
- **Remove batteries to prevent battery leakage and damage to the Product if it is not used for an extended period.**
- **Be sure that the battery polarity is correct to prevent battery leakage.**
- **Do not short the battery terminals together.**
- **Do not disassemble or crush battery cells and battery packs.**
- **Do not keep cells or batteries in a container where the terminals can be shorted.**
- **Do not put battery cells and battery packs near heat or fire. Do not put in sunlight.**

#### Note

*The batteries should be replaced in less than one minute after removal to avoid manually re-initializing the thermometer clock and date.*

To install or change the two AA batteries (see Figure 10):

1. Slide the locking tab on the battery door to the "unlock" position and then open the handle.
2. Insert the batteries noting their correct polarity.
3. Close and lock the handle.

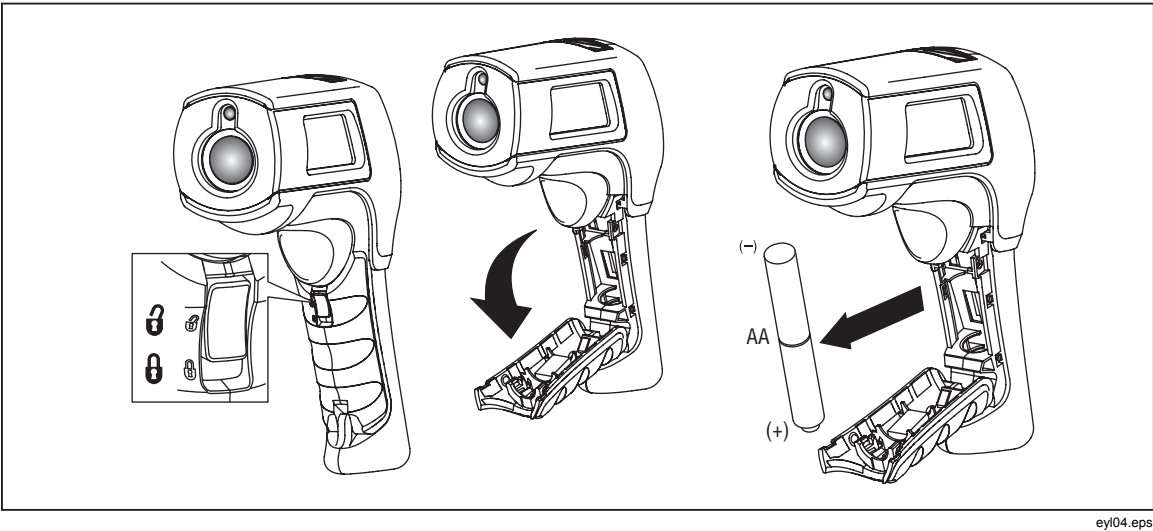

**Figure 10. Battery Replacement**

***Cleaning the Lens***

Blow off loose particles using clean compressed air. Carefully wipe the surface with a water-moistened cotton swab.

***Cleaning the Housing***

Use soap and water on a damp sponge or soft cloth.

**⚠ Caution**

To avoid damaging the thermometers, do NOT submerge them in water. Do not use abrasive cleaners, they will damage the case.

***User Replaceable Parts and Accessories***

***User Replaceable Parts***

See Table 7 for a list of replaceable parts.

**Table 7. Replaceable Parts**

| Part                                                                                                                                       | Part Number |
|--------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| 56x Manuals CD                                                                                                                             | 3833037     |
| 56x Getting Started<br>(English, French, German, Spanish, Portuguese,<br>Japanese, Simplified Chinese, Italian, Russian,<br>Polish, Czech) | 3833028     |

### Accessories

Optional accessories for the thermometers are:

- Soft Carrying Case (H6)
- Calibration Certification
- All Type-K Temperature Probes with standard mini-connector. See Table 8 for more information.

### Recommended Temperature Probes

See Table 8 for a list of recommended temperature probes.

**Table 8. Recommended Temperature Probes**

| Probe          | Usage                                                                                                                                                                                                                    |
|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>80PK-1</b>  | The general purpose bead probe is an alternative, for quick, accurate surface temperatures and air temperatures within ducts, vent temperatures.                                                                         |
| <b>80PK-8</b>  | Pipe clamp probes (2) are essential for tracking continuously changing temperature differentials on hydronic tubing and pipe loops, and good for quick, accurate refrigerant temperatures.                               |
| <b>80PK-9</b>  | The insulation piercing probe provides a sharp tip to pierce pipe insulation and flat probe tip for good surface thermal contact, air temperatures within ducts, and vent temperatures.                                  |
| <b>80PK-11</b> | Flexible Cuff Thermocouple Temperature Probe is a convenient way to attach a thermocouple to a pipe while keeping hands free.                                                                                            |
| <b>80PK-25</b> | The piercing probe is the most versatile option. Good for checking air temperature in ducts, surface temperature under carpets/pads, liquids, thermometer wells, vent temperatures, and for penetrating pipe insulation. |
| <b>80PK-26</b> | The tapered probe is a good general-purpose gas and surface probe, with a good length and low mass tip casing for faster reaction to surface and air temperatures.                                                       |

## Specifications

| Feature                                     | 561                                                                                                                                                                                                                                                    | 566                                                                                                                                                                                                                                                             | 568                                                       |
|---------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|
| IR Temperature Range                        | -40 °C to 550 °C<br>(-40 °F to 1022 °F)                                                                                                                                                                                                                | -40 °C to 650 °C<br>(-40 °F to 1202 °F)                                                                                                                                                                                                                         | -40 °C to 800 °C<br>(-40 °F to 1472 °F)                   |
| Accuracy                                    | <0 °C: $\pm(1.0\text{ °C} + 0.1\text{ °/1 °C})$<br>>0 °C: $\pm 1\text{ %}$ or $\pm 1.0\text{ °C}$ , whichever is greater<br>(<32 °F: $\pm 2\text{ °F} \pm 0.1\text{ °/1 °F}$ )<br>>32 °F: $\pm 1\text{ %}$ or $\pm 2\text{ °F}$ , whichever is greater |                                                                                                                                                                                                                                                                 |                                                           |
| Repeatability                               | $\pm 0.5\text{ %}$ of reading or $\pm 1\text{ °C}$ (2 °F),<br>whichever is greater.                                                                                                                                                                    | $\pm 0.5\text{ %}$ of reading or $\pm 0.5\text{ °C}$ (1 °F),<br>whichever is greater.                                                                                                                                                                           |                                                           |
| Display Resolution                          | 0.1 °C / 0.1 °F                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                 |                                                           |
| Spectral Response                           | 8 to 14 $\mu\text{m}$                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                 |                                                           |
| Response Time (95 %)                        | <500 ms                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                 |                                                           |
| K-Type Thermocouple Input Temperature Range | 0 °C to 100 °C<br>(32 °F to 212 °F)                                                                                                                                                                                                                    | -270 °C to 1372 °C (-454 °F to 2501 °F)                                                                                                                                                                                                                         |                                                           |
| K-Type Thermocouple Input Accuracy          | Input accuracy $\pm 2.2\text{ °C}$<br>( $\pm 4\text{ °F}$ )                                                                                                                                                                                            | -270 °C to -40 °C: $\pm(1\text{ °C} + 0.2\text{ °/1 °C})$<br>(-454 °F to -40 °F: $\pm(2\text{ °F} + 0.2\text{ °/1 °F})$ )<br>-40 °C to 1372 °C: $\pm 1\text{ %}$ or $1\text{ °C}$ (-40 °F to 2501 °F: $\pm 1\text{ %}$ or $2\text{ °F}$ ), whichever is greater |                                                           |
| K-Type Thermocouple Resolution              | 0.1 °C (0.1 °F)                                                                                                                                                                                                                                        | 0.1 °C/0.1 °F                                                                                                                                                                                                                                                   |                                                           |
| Distance:Spot (90 % energy)                 | 12:1                                                                                                                                                                                                                                                   | 30:1                                                                                                                                                                                                                                                            | 50:1                                                      |
| Laser sighting                              | Single laser, output <1 mW Class II, wavelength 630 to 670 nm                                                                                                                                                                                          |                                                                                                                                                                                                                                                                 |                                                           |
| Emissivity                                  | Lo, Med, Hi                                                                                                                                                                                                                                            | Digitally adjustable from 0.10 to 1.00 by 0.01 or via built-in table of common materials                                                                                                                                                                        |                                                           |
| Data storage                                | -                                                                                                                                                                                                                                                      | 20 points                                                                                                                                                                                                                                                       | 99 points                                                 |
| Communication                               | none                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                 | USB 2.0                                                   |
| Operating Altitude                          | 3000 meters above mean sea level                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                 |                                                           |
| Storage Altitude                            | 12,000 meters above mean sea level                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                 |                                                           |
| Relative Humidity                           | 10 % to 90 % RH non-condensing up to 30 °C (86 °F)                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                 |                                                           |
| Operating Temperature                       | 0 °C to 50 °C<br>(32 °F to 122 °F)                                                                                                                                                                                                                     | 0 °C to 50 °C (32 °F to 122 °F)                                                                                                                                                                                                                                 |                                                           |
| Storage Temperature                         | -20 °C to 65 °C<br>(-4 °F to 149 °F)                                                                                                                                                                                                                   | -20 °C to 60 °C (-4 °F to 149 °F)                                                                                                                                                                                                                               |                                                           |
| Vibration                                   | 2.5 G, IEC 68-2-6                                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                 |                                                           |
| Weight                                      | 0.322 kg (0.7099 lb)                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                 |                                                           |
| Dimensions                                  | 17.69 cm (6.965 in) H x 16.36 cm (6.441 in) L x 5.18 cm (2.039 in) W                                                                                                                                                                                   |                                                                                                                                                                                                                                                                 |                                                           |
| Power                                       | 2 AA /LR6 Batteries (alkaline or NiCD)                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                                 | 2 AA /LR6 Batteries or USB connection when used with a PC |
| Battery Life                                | 12 hours with laser and backlight on; 100 hours with laser and backlight off, at 100 % duty cycle (thermometer continuously on)                                                                                                                        |                                                                                                                                                                                                                                                                 |                                                           |
| CE Certification                            | EN/IEC 61326-1:2006, Class B, Criteria A<br>EN/IEC 61010-1:2001<br>EN/IEC 60825-1:2007                                                                                                                                                                 |                                                                                                                                                                                                                                                                 |                                                           |

### 561 Accessory

| Feature           | K-Type Thermocouple Probe (Wrap Type)                                                           |
|-------------------|-------------------------------------------------------------------------------------------------|
| Measurement Range | 0 °C to 100 °C (32 °F to 212 °F)                                                                |
| Accuracy          | ±2.2 °C (4.0 °F)                                                                                |
| Cable Length      | 505 mm (20 in) cable terminated with a Type K thermocouple inside a 495 mm (19.5 in) nylon cuff |

### 566/568 Accessory

| Feature           | K-Type Thermocouple Probe (Bead Type)                                                                                           |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Measurement Range | -40 °C to 260 °C (-40 °F to 500 °F)                                                                                             |
| Accuracy          | ±1.1 °C (±2.0 °F) from 0 °C to 260 °C (32 °F to 500 °F). Typically within 1.1 °C (2.0 °F) from -40 °C to 0 °C (-40 °F to 32 °F) |
| Cable Length      | 1 m (40 in) K-type thermocouple cable with standard miniature thermocouple connector and bead termination                       |